
Universal Instruction Manual I/A Series® Pressure Transmitters

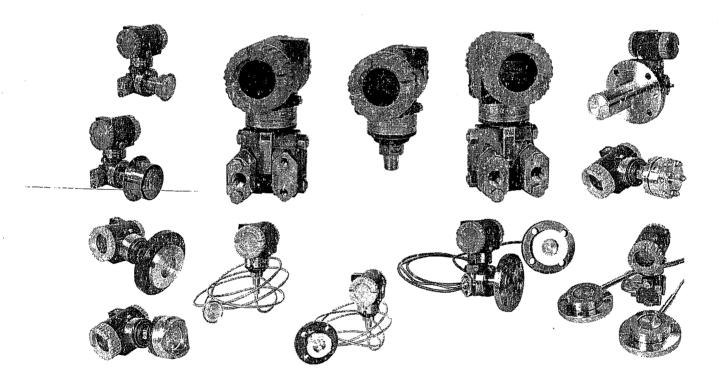



u i

 \Diamond

Instruction

MI 020-359 November 2004

Universal Instruction Manual

I/A Series® Pressure Transmitters Models IAP10, IAP20, IGP10, IGP20, IGP25 and IGP50, IDP10, IDP25, IDP50

Configuration, Calibration, Installation, and Operation

For safety information in English, refer to the web site listed below. (Note: This sentence is repeated in other languages below)
Se webstedet anført nedenfor for at få sikkerhedsoplysninger på dansk.
Ga naar het website-adres hieronder voor veiligheidsinformatie in het Nederlands.
Suomenkielisiä turvallisuustietoja on seuraavassa WWW-sivustossa.
Pour des informations de sécurité en français, consultez le site Web ci-dessous.
Sicherheitshinweise in deutscher Sprache finden Sie auf der unten angegebenen Website.
Για πληροφορίες ασφαλείας στα Ελληνικά, ανατρέξτε στο δικτυακό τόπο που αναγράφεται παρακάτω.
Per informazioni riguardanti la sicurezza in italiano, fare riferimento all'indirizzo Web indicato sotto.
For sikkerhetsinformasjon på norsk, se nettstedet angitt nedenfor.
Para obter informações sobre segurança em Português, consulte o Web site listado em baixo
Visite nuestro sitio Web si desea obtener más información de seguridad en español.
För säkerhetsinformation på svenska tittar du på vår webbsida på adress enligt nedan.

www.foxboro.com/us/eng/products/mniline/downloads/ecpressuresafety/ecpressuresafety.htm



Contents

Figures	v
Preface	vii
1. Safety Information	
Transmitter Identification	
Supply Voltage	1
Electrical Certification Rating	
Pressure Rating	
Pressure Seal PSFLT	4
Pressure Seals PSFPS and PSFES	
Pressure Seals PSFAR and PSFAD	
Pressure Seals PSTAR and PSTAD	
Pressure Seals PSISR and PSISD	
Pressure Seals PSSCR and PSSCTPSSSR and PSSST (Sanitary Tank Spud) Seals	/
Origin Code	7
Operating Temperature Limits	7
Process Wetted Materials	
Pressure Seals PSFLT, PSFPS, and PSFES	
Pressure Seals PSFAR, PSFAD, PSTAR, PSTAD, PSISR, and PSISD	11
Pressure Seals PSSCR	
Pressure Seals PSSCT	
General Warning	
ATEX Warning	
Explosionproof/Flameproof and Enclosure Warning	
• •	
Intrinsically Safe and Type n Warning	
Type n Warning	
Pressure Warnings	
Process Fluid Warning	
Seal or Sensor Fill Fluid Warning	
Parts Replacement Warning	
EC Declaration of Conformity	17
2. Installation	19
Mechanical Installation	19
Differential Pressure Transmitter	
Process-Mounted Transmitter	
Manifold Mounted Transmitter	20

Transmitter Mounted on a Coplanar Manifold Pipe- or Surface-Mounted Transmitter Venting and Draining Installation of Flow Measurement Piping Filling System with Seal Liquid Absolute and Gauge Pressure Transmitter IAP10, IGP10, IGP25 and IGP50 Transmitters IAP20 and IGP20 Transmitters Typical Transmitter Piping Transmitter with Seals	22 27 28 30 31 31 31 32
Positioning the Housing	
Positioning the Display	
Setting the Write Protect Jumper	
Cover Locks	
Wiring 4 to 20 mA Output Signal (Model Codes -A, -D, and -T) HART Multidrop Wiring (Model Code -T) 1 to 5 V dc Output Signal (Model Code -V) Power Supply Voltage and Current Output Load Three or Four Wire Connections FoxCom Communications Protocol (Model Code -D) Foundation Fieldbus Communication (Model Code -F)	36 40 41 41 41 41 44
Installing Fieldbus Software (Model Code -F)	48
Putting a Differential Pressure Xmtr Into Operation	48
Taking a Differential Pressure Xmtr Out of Operation	49
Moving Through the Menu Structure Entering Numerical Values Zeroing from the LCD Indicator Pushbuttons or Optional External Zero Button Zeroing from the HHT or HART Communicator	53 53 54
í. Calibration Diagram	57
5. Configuration Diagrams	59
FoxCom Communications (Code -D)	59
HART Communications (Code -T)	62
Foundation Fieldbus Communications (Code -F)	64
to 20 mA (Code -A) and 1 to 5 V dc (Code -V)	65
	6 7

Figures

1	Sample Transmitter Identification]
2	Sample Seal Data Plate	4
3	Pressure Connections	14
4	Sensor Replacement	15
5	Sensor Replacement (pvdf Inserts)	16
6		20
7	Typical Mounting of an IMV25 Transmitter Supported by a Bypass Manifold	20
8	Typical Mounting of BM-M4A and BM-M4T Manifold with -AM Bracket	21
9	Typical Mounting of MB3VIS-4 or MB5VIS-4 Manifold with Z-Shaped	
		21
10	Typical Mounting of IMV25 Transmitter on Coplanar Manifold	22
11	Pipe or Surface Mounted Transmitter Using a Standard Bracket	23
12	Examples of Mounting With a Standard Bracket	23
13	Details of a Universal Bracket	24
14	Mounting a Transmitter with Traditional Structure Using a Universal Bracket	25
15	Vertical Pipe Mounting a Transmitter with LP2 Structure Using a Universal Bracket	25
16		26
17		27
18		27
19		27
20		28
21		28
22		28
23		29
24		30
25		31
26	IAP20 and IGP20 Transmitter Mounting	32
27	Typical Transmitter Piping (IGP10 shown)	33
28		33
29	Housing Set Screw Location	34
30	Accessing Field Terminals	36
31		36
32	Supply Voltage and Loop Load	37
33	Loop Wiring 4 to 20 mA Output Transmitters	39
34	Wiring Several 4 to 20 mA Transmitters to a Common Power Supply	39
35	Typical Multidrop Network	40
36	Identification of Field Terminals	41
37	Three-wire Connection	42
38	Four-wire Connection	42
39	,	43
40	Wiring Several Transmitters to a Common Power Supply	44
41	Typical Transmitter Wiring to an I/A Series System	45
42		47

43	Local Display Module	52
44	Top Level Structure Diagram	52
45	Typical Menu Structure	53
46	Calibration Structure Diagram	57
47	Calibration Structure Diagram (Continued)	58
48	FoxCom Configuration Structure Diagram	59
49	FoxCom Configuration Structure Diagram (Continued)	60
50	FoxCom Configuration Structure Diagram (Continued)	61
51	HART Configuration Structure Diagram	62
52	HART Configuration Structure Diagram (Continued)	63
53	HART Configuration Structure Diagram (Continued)	64
54	Configuration Structure Diagram (Code -A and -V)	65

Preface

This Universal Instruction Manual is designed to provide the user with a single, concise, easy-to-use manual that covers the key points needed for configuration, calibration, installation, and operation of I/A Series Pressure Transmitters.

It covers all models of single variable pressure transmitters in the I/A Series family, including absolute, gauge, and differential pressure transmitters, with FoxCom, HART, FOUNDATION fieldbus, or analog output electronics.

This universal manual, along with a CD containing detailed information, is provided free of charge with every I/A Series Pressure Transmitter, unless the purchaser requests that these two items be omitted.

For additional detailed information about each model, including dimensional prints, parts lists, and more detailed instructions, please refer to the standard CD supplied or the optional paper instruction book that is available from Foxboro for each model in the line.

- Standard Documentation Shipped with every I/A Series Pressure Transmitter
 - A brief "Getting Started" Pocket-Sized Bulletin
 - ♦ This Universal Instruction Manual
 - ♦ A CD that contains the complete documentation set for I/A Series Pressure Transmitters
- ♦ When Optional Feature K1 is specified in the Model Code when the transmitter is ordered:

A brief "Getting Started" Pocket-Sized Bulletin only is supplied

Optional Feature K1 is offered for those users who want Foxboro to omit the documentation shipped with every transmitter. This may be specified when multiple identical transmitters are ordered and the user does not want multiple sets of documentation.

1. Safety Information

Transmitter Identification

A typical data plate is shown in Figure 1.

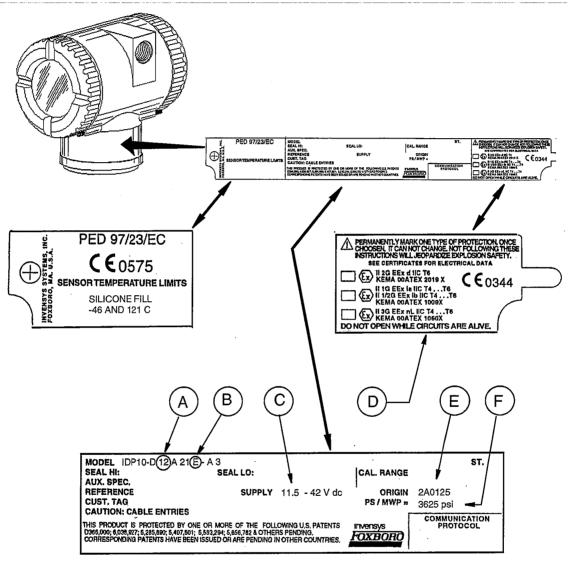


Figure 1. Sample Transmitter Identification

Review the model code on the data plate attached to your transmitter to determine its electrical, pressure, and hazardous location ratings.

Supply Voltage

The proper supply voltage is printed on the data plate. See Item C on the example shown in Figure 1. Ensure that the proper electrical source is connected to the transmitter.

Electrical Certification Rating

The electrical safety design code is printed on the data plate as part of the model code. See Item B on the example shown in Figure 1. See Table 1 to identify this code. The type of protection is also marked on the data plate. See Item D on the example shown in Figure 1.

Table 1. Electrical Safety Specifications

Testing Laboratory, Types of Protection,		Electrical Safety
and Area Classification	Application Conditions	Design Code
ATEX intrinsically safe; II 1 G EEx ia IIC, Zone 0; or II 1/2 G EEx ib IIC, Zone 0/Zone1; hazardous locations.	Temperature Class T4-T6. See certificate KEMA 00ATEX1009 X for electrical data. Not applicable to Electronic	E
	Version -A, -F, and -V products.	
ATEX flameproof; II 2 G EEx d IIC, Zone 1; hazardous locations.	Temperature Class T6. See certificate KEMA 00ATEX2019 X for electrical data. Flameproof classification is not applicable to IAP10 and IGP10.	D
ATEX protection n; II 3 G Ex nL IIC, Zone 2; hazardous locations.	Temperature Class T4-T6. See certificate KEMA 00ATEX1060 X for electrical data. Not applicable to Electronic Version -A, -F, and -V products.	N
ATEX multiple certifications, ia and ib, d, and n. Refer to codes E, D, and N for details.	Refer to codes E, D, and N. (a)	М
CSA intrinsically safe for Class I, Division 1, Groups A, B, C, and D; Class II, Division 1, Groups E, F, and G; and Class III, Division 1 hazardous locations. CSA explosion proof for Class I, Division 1, Groups B, C, and D; dust-ignition proof for Class II, Division 1, Groups E, F, and G; Class III, Division 1 hazardous locations.	85°C (185°F) maximum ambient. Not applicable to Electronic Version -A, and -F products. Temperature Class T6 at 80°C (176°F) and T5 at 85°C (185°F) maximum ambient.	С
CSA for Class I, Division 2, Groups A, B, C, and D; Class II, Division 2, Groups F and G; Class III, Division 2 hazardous locations.		

Table 1. Electrical Safety Specifications (Continued)

Testing Laboratory, Types of Protection,		Electrical Safety
and Area Classification	Application Conditions	Design Code
FM intrinsically safe for Class I, Division 1, Groups A, B, C, and D; Class II, Division 1, Groups E, F, and G; Class III, Division 1	Connect per MI 020-427. Temperature Class T4A at 40°C (104°F) and T4 at 85°C (185°F) maximum ambient.	
hazardous locations.	Not applicable to Electronic Version -A and -F products.	
FM explosionproof for Class I, Division 1, Groups B, C, and D; dust-ignitionproof for Class II, Division 1, Groups E, F, and G; Class III, Division 1 hazardous locations.	Temperature Class T6 at 80°C (176°F) and T5 at 85°C (185°F) maximum ambient.	F
FM nonincendive for Class I, Division 2, Groups A, B, C, and D; Class II, Division 2, Groups F and G; Class III, Division 2	Connect to source not exceeding 42.4 V. Temperature Class T6 at 40°C (104°F) and T4A at 85°C (185°F) maximum	
hazardous locations.	ambient. Not applicable to Electronic Version -F products.	
SAA Ex ia, IIC, intrinsically safe, Gas Group IIC, Zone 0.	Temperature Class T4. Not applicable to Electronic Version -A, -F, and -V products.	
SAA Ex d, IIC, flameproof, Gas Group IIC, Zone 1.	Temperature Class T6. Not applicable to Electronic Version -F and -V products.	A
SAA Ex n, IIC, nonincendive, Gas Group IIC, Zone 2.	Temperature Class T4. Not applicable to Electronic Version -F and -V.	K.

(a) User must permanently mark (check off in rectangular block on data plate) one type of protection only (ia and ib, d, or n). This mark cannot be changed once it is applied. See Item D on the example shown in Figure 1.

— NOTE

These transmitters have been designed to meet the electrical safety description listed in Table 1. For detailed information or status of testing laboratory approvals/certifications, contact Invensys Foxboro.

PED Certification

Invensys Foxboro offers the PED (Harmonized Pressure Equipment Directive for the European Community) certification only with transmitters ordered with ATEX Electrical Safety Design Code selections. Transmitters with PED certification have a CE marking on the data plate that also carries the PED number 0575.

Pressure Rating

The maximum working pressure (PS or MWP) for the transmitter is printed on the data plate. See Item F on the example shown in Figure 1.

The data plate of flanged level transmitters and transmitters with flanged pressure seals are stamped with the MWP if the transmitter pressure range is the limiting factor. It is stamped "Flange Rate" if the flange rating is the limiting factor. The MWP of the flanged seal is stamped on the seal data plate. See Figure 2.

MODEL CODE: PSFPS-A2S0E313B MWP: 275 psig at 100°F NOTICE: BREAKING CONNECTIONS VOIDS WARRANTY BE SURE FILL FLUID CAN MIX SAFELY WITH PROCESS HIGH SIDE SEAL HIGH SIDE FLUID, DC200, 10 cSt SILICONE TEMP RANGE -40 TO +450°F PROCESS WETTED MATERIAL 316 SS

Figure 2. Sample Seal Data Plate

When using transmitters with threaded, in-line saddle weld, or sanitary pressure seals, compare the MWP of the transmitter on the transmitter data plate and the MWP of the seals on the seals data plates and use the lesser value as the system MWP.

The MWP on the seal data plates may not be given at your process temperature. Use the following information and industry standards as required to determine the actual pressure limits for your application.

Pressure Seal PSFLT

Process Connections Flange Process Temperature^(c) Carbon Steel (d) 316L Stainless Steel (e) ANSI Class 150 ^(a) 100°F 275 psig 285 psig 200°F 260 psig 240 psig 300°F 230 psig 215 psig 450°F 185 psig 183 psig ANSI Class 300 ^(a) 100°F 740 psig 720 psig 200°F 675 psig 620 psig 300°F 655 psig 560 psig 450°F 618 psig 498 psig ANSI Class 600 ^(a) 100°F 1480 psig 1440 psig 200°F 1350 psig 1240 psig 300°F 1315 psig 1120 psig 450°F 1235 psig 993 psig DIN PN 10/16 (b) 50°C 16 bar 16 bar 100°C 16 bar 16 bar 150°C 14.5 bar 14 bar 250°C 11 bar 10.5 bar DIN PN 10/40 50°C 40 bar 40 bar

40 bar

37.5 bar

32 bar

Table 2. Pressure Seal PSFLT Pressure Limits

Maximum Working Pressure

35 bar

33.5 bar

30 bar

- (a) ANSI flanges per ASME/ANSI B16.5-1988
- (b)DIN flanges per BS4504.

and PN 25/40 (b)

- (c) Flange temperature/pressure ratings only; seal temperature ratings may be lower; refer to Table 9.
- (d)ASME/ANSI Material Group 1.1; linear interpolation acceptable.

100°C

150°C

250°C

(e)ASME/ANSI Material Group 2.2; linear interpolation acceptable.

Pressure Seals PSFPS and PSFES

Table 3. Pressure Seal PSFPS and PSFES Pressure Limits

Process Connection	Process	Maximum Working Pressure		
Flange	Temperature ^(c)	Carbon Steel (d)	316L Stainless Steel (e)	
ANSI Class 150 (a)	100°F	285 psig	275 psig	
	200°F	230 psig	240 psig	
	400°F	200 psig	195 psig	
	500°F	170 psig	170 psig	
	600°F	140 psig	140 psig	
ANSI Class 300 (a)	100°F	740 psig	720 psig	
	200°F	675 psig	620 psig	
	400°F	635 psig	515 psig	
	500°F	600 psig	480 psig	
	600°F	550 psig	450 psig	
ANSI Class 600 (a)	100°F	1480 psig	1440 psig	
	200°F	1350 psig	1240 psig	
	400°F	1270 psig	1030 psig	
	500°F	1200 psig	955 psig	
	600°F	1095 psig	905 psig 🐃	
DIN PN 10/16 (b)	50℃	16 bar	16 bar	
	100℃	16 bar	16 bar	
	150°C	14.5 bar	14 bar	
	200°C	13 bar	12 bar 🐃	
	300°C	9 bar	9 bar	
DIN PN 10/40	50℃	40 bar	40 bar	
and PN 25/40 ^(b)	100℃	40 bar	35 bar	
	150°C	37.5 bar	33.5 bar	
	200°C	35 bar	32 bar	
	300°C	28 bar	28 bar	

⁽a)ANSI flanges per ASME/ANSI B16.5-1988

⁽b)DIN flanges per BS4504.

⁽c)Flange temperature/pressure ratings only; seal temperature ratings may be lower; refer to Table 9.

⁽d)ASME/ANSI Material Group 1.1; linear interpolation acceptable.

⁽e)ASME/ANSI Material Group 2.2; linear interpolation acceptable.

2280

Pressure Seals PSFAR and PSFAD

note 4. 1765sure Sents 1 S1711C and 1 S171D 1765sure Limits						
Process		Pressure Rating in psig ^(a)				
Connection Flange	Process Temperature ^(b)	Class 150	Class 300	Class 600	Class 1500	
	-20°F	285	740	1480	3705	
	100°F	285	740	1480	3705	
ANSI	200°F	260	675	1350	3375	
Carbon Steel	300°F	230	655	1315	3280	
Carbon Steel	400°F	200	635	1270	3170	
	500°F	170	600	1200	2995	
	580°F	146	560	1120	2785	
	-20°F	275	720	1440	3600	
	100°F	275	720	1440	3600	
ANSI	200°F	240	620	1240	3095	
Stainless Steel	300°F	215	560	1120	2795	
Stanness Steel	400°F	195	515	1030	2570	
	500°F	170	480	955	2390	

Table 4. Pressure Seals PSFAR and PSFAD Pressure Limits

456

915

146

Pressure Seals PSTAR and PSTAD

580°F

Table 5. Pressure Seals PSTAR and PSTAD Pressure Limits

Process	Bolting (Code "S"	Bolting Code "C"	
Temperature	2 and 3 inch	4 inch	2 and 3 inch	4 inch
20°F	1250	750	2500	1500
100°F	1250	750	2500	1500
200°F	1075	645	2150	1290
300°F	975	585	1950	1170
400°F	900	540	1800	1080
500°F	835	500	1670	1000
580°F	803	481	1606	963

Seal temperature rating may be lower depending on mounting and fill fluid; refer to Table 9.

The pressure rating is dependent on the diaphragm size and the bolting material. The diaphragm size and bolting material are identified in the pressure seal model number which is located on the pressure seal. See following example:

⁽a) The maximum working pressure with the nonmetallic ptfe and PVC lower housings is 150 psig regardless of the higher allowable flange pressure range.

⁽b) Flange temperature/pressure ratings only; seal temperature rating may be lower depending on mounting and fill fluid; refer to Table 9.

Pressure Seals PSISR and PSISD

The maximum working pressure is equivalent to a nominal 3- or 4-inch Schedule 40 pipe as defined by ASME/ANSI standards.

Pressure Seals PSSCR and PSSCT

The maximum working pressure of the seal process connection varies with the clamping device used. Refer to Tri-Clover Tri-Clamp standards to determine the pressure limits of the clamping system that you are using.

PSSSR and PSSST (Sanitary Tank Spud) Seals

The maximum working pressure of mini tank spud seal is 1.55 MPa at 120°C (225 psi at 250°F). That of the standard tank spud seal is 1.38 MPa at 120°C (200 psi at 250°F).

Origin Code

The origin code identifies the area of manufacture and the year and week of manufacture. See Item E on the example shown in Figure 1. In the example, 2A means the product was manufactured in the Measurement and Instrument Division, 01 identifies the year of manufacture as 2001, and 25, the week of manufacture in that year.

Operating Temperature Limits

The operating temperature limits of the electronics are -40°C and +85°C (-40°F and +185°F). Ensure that the transmitter is operated within this range.

The sensor body operating temperature limits are determined by the sensor fill fluid. The cover material, sensor diaphragm material and fill fluid are specified by two characters in the model code on the data plate. See Item A on the example shown in Figure 1. Also see Table 6 and Table 7 to interpret this part of the code and Table 8 to determine the sensor body temperature limits. In the example IDP10-D12A21E-A3, the number 12 identifies the fill fluid in Table 6 as silicone. Table 8 identifies silicone as having temperature limits of -46 and +121°C (-50 and +250°F).

Table 6. Interpretation of Model Code for IDP10, IAP20, IGP20, IDP25, and IDP50 Transmitters

Code	Cover Material	Sensor Diaphragm Material	Fill Fluid
10	Steel	Co-Ni-Cr	Silicone
11	Steel	Co-Ni-Cr	Fluorinert
12	Steel	316 ss	Silicone
13	Steel	316 ss	Fluorinert
16	Steel	Hastelloy C	Silicone
17	Steel	Hastelloy C	Fluorinert
20	316 ss	Co-Ni-Cr	Silicone

Table 6. Interpretation of Model Code for IDP10, IAP20, IGP20, IDP25, and IDP50 Transmitters (Continued)

Code	Cover Material	Sensor Diaphragm Material	Fill Fluid
21	316 ss	Co-Ni-Cr	Fluorinert
22	316 ss	316 ss	Silicone
23	316 ss	316 ss	Fluorinert
2G	316 ss	316 ss, gold-plated	Silicone
24	316 ss	Monel	Silicone
25	316 ss	Monel	Fluorinert
26	316 ss	Hastelloy C	Silicone
27	316 ss	Hastelloy C	Fluorinert
34	Monel	Monel	Silicone
35	Monel	Monel	Fluorinert
46	Hastelloy C	Hastelloy C	Silicone
47	Hastelloy C	Hastelloy C	Fluorinert
48	Hastelloy C	Tantalum	Silicone
49	Hastelloy C	Tantalum	Fluorinert
78	pvdf Insert	Tantalum	Silicone
79	pvdf Insert	Tantalum	Fluorinert
F1			Silicone
F2			Fluorinert
F3			Silicone
F4			Fluorinert
S1			Silicone
S2			Fluorinert
S3			Silicone
S4	N/A - I leed to	vith pressure seal	Fluorinert
S5	14/21 - O3CU V	vicii picosuic scai	Silicone
S6			Fluorinert
SA			Silicone
SB			Inert
SC			Silicone
SD			Inert
SE		Silicone	
SF			Inert

Table 7. Interpretation of Model Code for IAP10, IGP10, IGP25, and IGP50 Transmitters

Code	Process Connector Material	Sensor Diaphragm Material	Fill Fluid
20	316L ss	Co-Ni-Cr	Silicone
21-	316L ss	Co-Ni-Cr	Fluorinert
22	316L ss	316L ss	Silicone
23	316L ss	316L ss	Fluorinert
24	15-5 ss	15-5	None
26	Inconel X-750	Inconel X-750	None
28	13-8Mo ss	13-8Mo ss	None
30	316L ss	Hastelloy C	Silicone
31	316L ss	Hastelloy C	Fluorinert
32	Hastelloy C	Hastelloy C	Silicone
33	Hastelloy C	Hastelloy C	Fluorinert
TA	316L ss	316L ss	Neobee
T2	316L ss	316L ss	Neobee
T3	316L ss	316L ss	Neobee
TB	316L ss	Hastelloy C	Neobee
T4	316L ss	Hastelloy C	Neobee
T5	316L ss	Hastelloy C	Neobee
M1	316L ss	316L ss	Neobee
M6	316L ss	316L ss	Neobee
M9	316L ss	316L ss	Neobee
PX	316L ss	316L ss	Neobee
PZ	316L ss	316L ss	Neobee
PA	316L ss	316L ss	Silicone
PB	316L ss	316L ss	Silicone
PC	316L ss	316L ss	Silicone
PD	316L ss	316L ss	Silicone
PE	316L ss	Hastelloy C	Silicone
PF	316L ss	Hastelloy C	Silicone
PG	316L ss	Hastelloy C	Silicone
PH	316L ss	Hastelloy C	Silicone
PJ	316L ss	Hastelloy C	Silicone
D1			Silicone
D2	N/A - Used with pressure seal		Fluorinert
S3			Silicone
-S4			Fluorinert
SC			Silicone
SD			Inert

Table 8. Sensor Body Operating Temperature Limits for Models Listed in Tables 6 and 7

Limiting Factor	Temperature Limits
Silicone Fill Fluid	-46 and +121°C (-50 and +250°F)
Fluorinert Fill Fluid	-29 and +121°C (-20 and +250°F)
Neobee Fill Fluid	-18 and +204°C (0 and 400°F) ^(a)
pvdf Inserts	-7 and +82°C (20 and 180°F)

⁽a) At process connection

For transmitters with pressure seals, the temperature limits at the seals are shown in Table 9. The pressure seal fill fluid code is found in the pressure seal model code as shown in the following examples (fill fluid code position is underlined and bolded):

PSFLT	PSFLT-B2S015 <u>3</u>
PSFPS and PSFES	PSFPS-A2S013 <u>3</u> 4E
PSFAR	PSFAD-D232SSS2SBC <u>1</u> 3M
PSFAD	PSFAD-D232SSS2SBC <u>1</u>
PSTAR	PSTAR-B32USSS1BCC <u>3</u> 4F
PSTAD	PSTAR-B32USSS1BCC <u>3</u>
PSISR	PSISR-A23JSSS1SC <u>1</u> 4M
PSISD	PSISD-A23JSSS1SC <u>1</u>
PSSCR	PSSCR-D21S3 <u>5</u> 4H
PSSCT	PSSCT-B21S 5 5
PSSSR	PSSSR-B4S23 <u>5</u> 4H
PSSST	PSSST-B4S2 5 5

Table 9. Seal Fill Fluid and Operating Temperature Limits

		Temperature Limits	
1 I		Direct Connected PSFLT, PSFAD, PSTAD, PSISD,	Remote Connected PSFPS, PSFES, PSFAR,
Code	Fill Fluid	PSSCT, PSSST	PSTAR, PSISR, PSSCR, PSSSR
1	DC200, 10cS, Silicone	-40 and +204°C (-40 and +400°F)	-40 and +232°C (-40 and +450°F)
2	FC77 Fluorinert	-59 and +82°C (-75 and +180°F)	-59 and +82°C (-75 and +180°F)
3	DC200, 3cS, Silicone	-40 and +149°C (-40 and +300°F)	-40 and +149°C (-40 and +300°F)
4	DC704 (HTF) Silicone	0 and +204°C (32 and 400°F)	0 and +304°C (32 and 580°F)
5	Neobee	-18 and +204°C (0 and 400°F)	-18 and +204°C (0 and 400°F)

Process Wetted Materials

Refer to Table 6 to determine if the process cover and sensor diaphragm material are suitable for the process. For transmitters with pressure seals, the seal wetted material is as follows:

Pressure Seals PSFLT, PSFPS, and PSFES

Table 10. Pressure Seal PSFLT, PSFPS, and PSFES Wetted Materials

Material Code	Material
S	316L ss
C	Hastelloy C
T	Tantalum

The process wetted material code is found in the pressure seal model number which is located on the pressure seal. See following example:

PSFLT-B2<u>\$</u>0153

SEAL WETTED MATERIAL

Pressure Seals PSFAR, PSFAD, PSTAR, PSTAD, PSISR, and PSISD

Table 11. Pressure Seal Lower Housing Materials

Material Code	Material
S	316 ss
K	Carbon Steel
С	Hastelloy C
T -	Tantalum Plate
E	Titanium Grade 4
L	Inconel 600
M	Monel 400
N	Nickel 200
G	Glass Filled ptfe
P	Polyvinyl Chloride


Table 12. Pressure Seal Diaphragm Materials

Material Code	Material
S	316L ss
С	Hastelloy C276
T	Tantalum
E	Titanium Grade 2
L	Inconel 600
M	Monel 400
N	Nickel 200

Table 13. Pressure Seal Gasket Materials

Material Code	Material
S	Organic Fiber with Nitrile Binder
3	Silver Plated 316 ss
T	ptfe
В	Buna N
V	Viton
G	Grafoil
T	Silver Plated Hastelloy C

The material codes are found in the pressure seal model number which is located on the pressure seal. See following example:

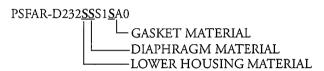

Pressure Seals PSSCR

Table 14. Pressure Seal PSSCR Diaphragm Materials

Material Code	Material
S	316L ss
С	Hastelloy C276

The diaphragm material code is found in the pressure seal model number which is located on the pressure seal. See following example:

The housing material is 316 ss.

The gasket is provided by the user.

Pressure Seals PSSCT

The housing material is 316 ss.

The diaphragm material is 316L ss.

The gasket is provided by the user.

Pressure Seals PSSSR and PSSST

The housing material is 316 ss.

The diaphragm material is 316L ss.

The gasket material is EPDM.

General Warning

-/!\WARNING

Transmitters must be installed to meet all applicable local installation regulations, such as hazardous location requirements, electrical wiring codes, and mechanical piping codes. Persons involved in the installation must be trained in these code requirements to ensure that the installation takes maximum advantage of the safety features designed into the transmitter.

ATEX Warning

−<u></u> WARNING -

Apparatus marked as Category 1 equipment and used in hazardous areas requiring this category must be installed in such a way that, even in the event of rare incidents, the versions with an aluminum alloy enclosure can not be an ignition source due to impact and friction.

–∕!\\WARNING —

To install a transmitter labeled with multiple approvals, select and permanently mark the certification label in the tick block to distinguish the installed approval type from the unused approval types. Once installed, the transmitter cannot be reinstalled using any other approval type. Not following these instructions will jeopardize explosion safety.

Explosionproof/Flameproof and Enclosure Warning

- WARNING

To prevent possible explosion and to maintain explosion proof/flame proof and dustignition proof protection, plug unused openings with the provided metal pipe plug. This plug must be engaged a minimum of five full threads. The threaded housing covers must be installed. Turn covers to seat O-ring into the housing and then continue to hand tighten until the cover contacts the housing metal-to-metal.

If the electronics housing is removed for any reason, it must be hand tightened fully. Then engage the set screw until it bottoms out and back it off 1/8th turn. Fill the set screw recess with red lacquer (Foxboro Part number X0180GS or equivalent). The housing then may be rotated up to one full turn in a counterclockwise direction for optimum access to adjustments.

Intrinsically Safe and Type n Warning

-/ WARNING

Since Foxboro does not specify live maintenance, to prevent ignition of flammable atmospheres, disconnect power before servicing unless the area is certified to be nonhazardous.

Type n Warning

- WARNING

On transmitters certified for ATEX protection n, CSA Class I, Division 2, or FM nonincendive for Class I, Division 2, the threaded housing covers must be installed.

Pressure Warnings

-**!** WARNING -

When installing your transmitter, tighten process connector bolts to a torque of 61 N•m (45 ft•lb) and drain plugs and optional vent screws to 20 N•m (15 ft•lb). See Figure 3.

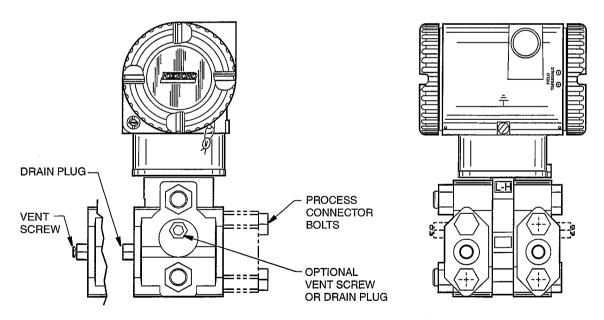


Figure 3. Pressure Connections

–∕!\ WARNING

If a sensor is replaced or process covers are rotated for venting, replace the gaskets and torque cover bolts (see Figure 4 and 5) to 100 N•m (75 ft•lb) in several even increments. Torque values are 66 N•m (50 ft•lb) when optional 316 ss bolts are specified (option B1). A pressure test is required. Perform a hydrostatic test with a liquid following proper hydrostatic test procedures. Pressure test the process cover assembly by applying a hydrostatic pressure of 150% of the maximum static and overrange pressure rating to both sides of the process cover/sensor assembly simultaneously through the process connections. Hold pressure for one minute. There should be no leakage of the test fluid through the gaskets.

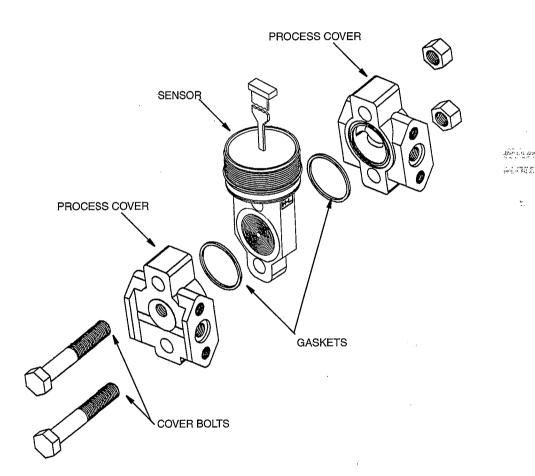


Figure 4. Sensor Replacement

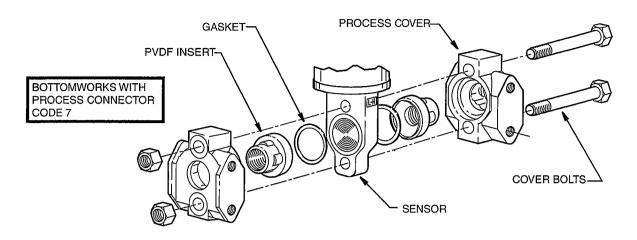


Figure 5. Sensor Replacement (pvdf Inserts)

Process Fluid Warning

-/ WARNING

If process containing parts are to be disassembled:

- 1. Make sure that process fluid is not under pressure or at high temperature.
- 2. Take proper precautions concerning leakage or spillage of any toxic or otherwise dangerous fluid. Follow any Material Safety Data Sheet (MSDS) recommendations.

Seal or Sensor Fill Fluid Warning

Even though the volume of fill fluid is small, be sure that the fill fluid can mix safely with the process fluid.

Parts Replacement Warning

-/! WARNING

If replacing parts, do not use parts of other materials or that in any other way change the product as described on the data plate.

EC Declaration of Conformity

We, Manufacturer:

Invensys Systems, Inc. 33 Commercial Street Foxboro, Massachusetts 02035 U.S.A.

declare under our sole responsibility that the

I/A Series Pressure Transmitters IGP, IAP, IDP, IPI, IMV

are in conformity with the protection requirements of Council Directives:

- ♦ 89/336/EEC (amended by 92/31/EEC and 93/68/EEC) on the approximation of the laws of the Member States relating to Electromagnetic Compatibility
- 94/9/EC on the approximation of the laws of the Member States concerning equipment and protective systems intended for use in potentially explosive atmospheres
- 97/23/EC on the approximation of the laws of the Member States concerning pressure equipment

The basis on which Conformity is being declared:

- EN 61326, Electrical equipment for measurement, control and laboratory use EMC requirements, Class A emission limits, and immunity requirements according to Annex A for Industrial locations.
- EN50014 1997 A1 1999 A2 1999 Electrical apparatus for potentially explosive atmospheres "General Requirements."
- EN50018 2000 Electrical apparatus for potentially explosive atmospheres "Flameproof enclosures 'd'".
- EN50020 1995 Electrical apparatus for potentially explosive atmospheres "Intrinsic safety 'I'".
- EN50021 1999 Electrical apparatus for potentially explosive atmospheres "Type of protection 'n'".
- EN50284 1999 Special requirements for construction, test and marking of electrical apparatus of group II Category 1G.

For compliance with ATEX and in conjunction with the harmonized standards listed, products are in accordance with EC Type Examination Certificates KEMA 00ATEX 1060, KEMA 00ATEX2019 and KEMA 00ATEX 1009. Refer to Product Specification Sheet and marking on product for details pertaining to individual model codes.

For the Pressure Equipment Directive, conformity is based on a certificate issued by Det Norske Veritas, based on Maximum Working Pressure (MWP). Conformity Assessment Module "H" is applied for Models IGP, IAP, and IDP where the MWP is greater than 200 bar. Conformity Assessment Module "A" is applied for Model IGP where the MWP is greater than 1000 bar.

2. Installation

To avoid damage to the transmitter sensor, do not use any impact devices, such as an impact wrench or stamping device, on the transmitter.

- NOTE

- 1. The transmitter should be mounted so that any moisture condensing or draining into the field wiring compartment can exit through one of the two threaded conduit connections.
- 2. Use a suitable thread sealant on all connections.
- 3. If the transmitter is not installed in the vertical position, readjust zero output to eliminate the position zero effect.

Mechanical Installation

Differential Pressure Transmitter

The IDP10, IDP25, and IDP50 differential pressure transmitters can be supported by the process piping (Figure 6), on a bypass manifold (Figures 7 through 10), or mounted to a vertical or horizontal pipe or surface using an optional mounting bracket (Figures 11 through 16). For dimensional information, refer to DP 020-446.

- NOTE

- 1. The IDP25 and IDP50 transmitters are only available in the Traditional Structure at this time.
- 2. If the transmitter is not installed in the vertical position, readjust zero output to eliminate the position zero effect.
- 3. When pvdf inserts (structure codes 78/79) are used, the process connection must be made directly to the pvdf inserts in the Hi and Lo side process covers.
- 4. The transmitter should be mounted so that any moisture condensing or draining into the field wiring compartment can exit through one of the two threaded conduit connections.

Process-Mounted Transmitter

Figure 6 shows the transmitter mounted to and supported by the process piping.

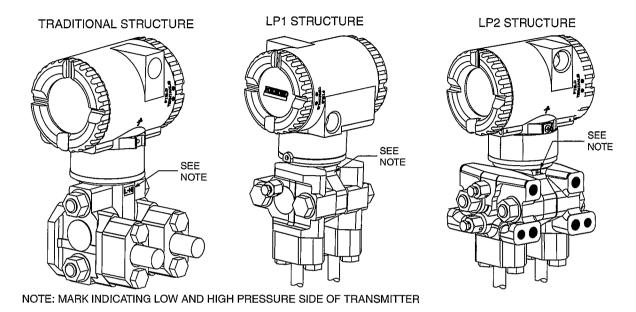


Figure 6. Typical Mounting of an IMV25 Transmitter Supported by Process Piping

Manifold Mounted Transmitter

Figure 7 shows the transmitter mounted to and supported by a bypass manifold. Figures 8 and 9 show a bypass manifold mounted to a DN50 (2 inch) pipe with an optional mounting bracket.

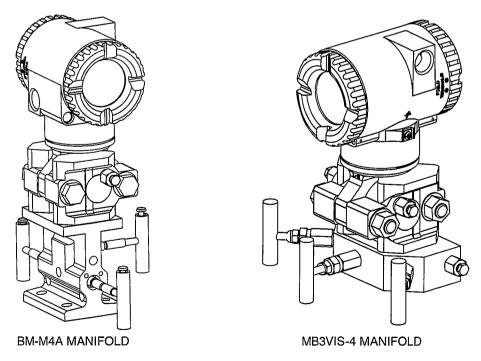


Figure 7. Typical Mounting of an IMV25 Transmitter Supported by a Bypass Manifold

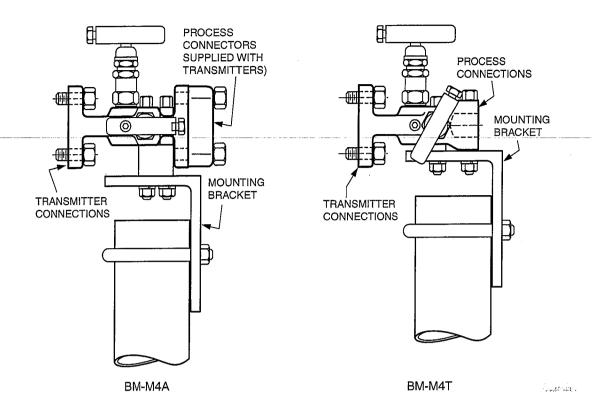


Figure 8. Typical Mounting of BM-M4A and BM-M4T Manifold with -AM Bracket

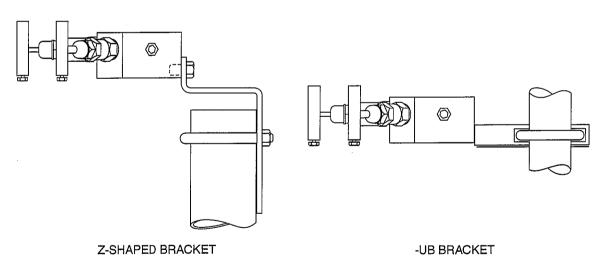


Figure 9. Typical Mounting of MB3VIS-4 or MB5VIS-4 Manifold with Z-Shaped and -UB Bracket

Transmitter Mounted on a Coplanar™ Manifold

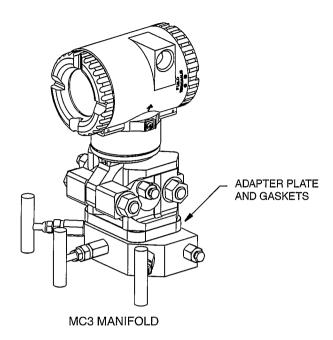


Figure 10. Typical Mounting of IMV25 Transmitter on Coplanar Manifold

Pipe- or Surface-Mounted Transmitter

To mount the transmitter to a pipe or surface, use the Standard Mounting Bracket Set (Model Code Option -M1 or -M2) or Universal Bracket Mounting Set (Model Code Option -M3).

Standard Mounting Bracket

The transmitter (with either traditional or LP2 low-profile structures) can be mounted to a vertical or horizontal, DN 50 or 2-in pipe using a standard bracket. See Figure 11 for details and Figure 12 for examples of different situations. Secure the mounting bracket to the transmitter using the four screws provided. Mount the bracket to the pipe. To mount to a horizontal pipe, turn the U-bolt 90° from the position shown in Figure 11. The mounting bracket can also be used for wall mounting by securing the bracket to a wall using the U-bolt mounting holes.

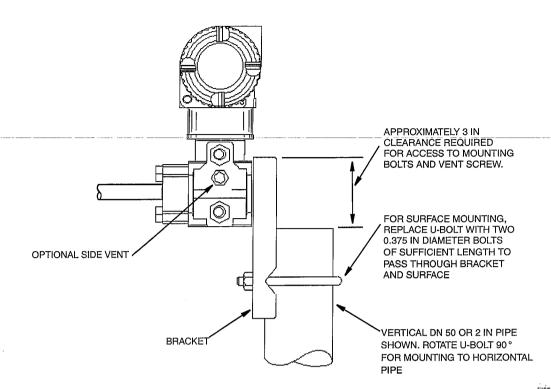


Figure 11. Pipe or Surface Mounted Transmitter Using a Standard Bracket

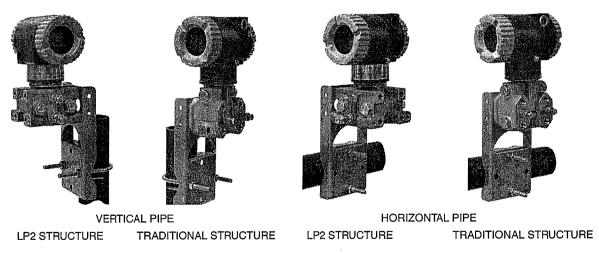


Figure 12. Examples of Mounting With a Standard Bracket

Universal Mounting Bracket

The transmitter (with either traditional or LP2 low-profile structure) can be mounted in a myriad of positions to a vertical or horizontal, DN 50 or 2-in pipe using a universal bracket. See Figure 13 for details of a universal bracket and Figure 14 through Figure 16 for examples of different mounting situations. Secure the mounting bracket to the transmitter using the two long or four short screws provided. Mount the bracket to the pipe. The mounting bracket can also be used for wall mounting by securing the bracket to a wall using the U-bolt mounting holes.

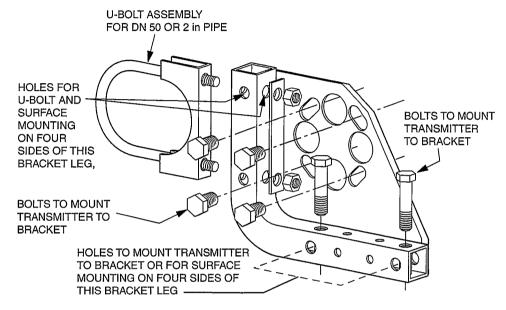


Figure 13. Details of a Universal Bracket

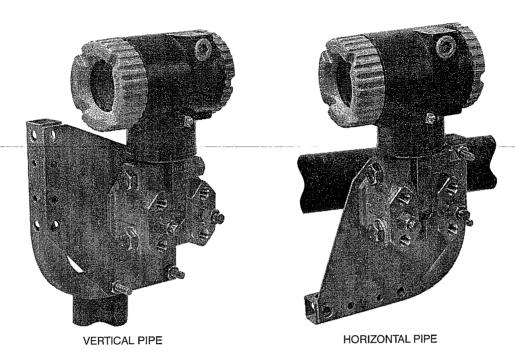


Figure 14. Mounting a Transmitter with Traditional Structure Using a Universal Bracket

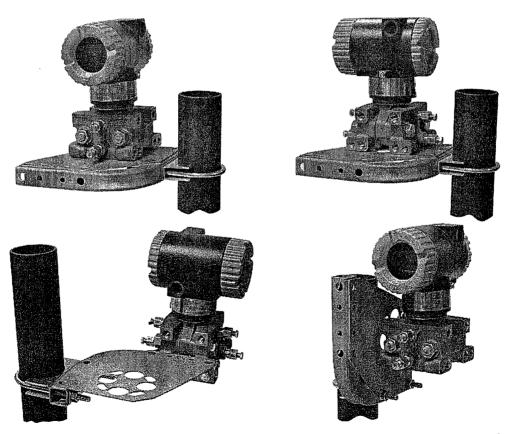


Figure 15. Vertical Pipe Mounting a Transmitter with LP2 Structure Using a Universal Bracket



Figure 16. Horizontal Mounting a Transmitter with LP2 Structure Using a Universal Bracket

Venting and Draining

Traditional Structure

Sensor cavity venting and draining is provided for both vertical and horizontal mounting. For vertical mounted units, draining is via a drain screw shown in Figure 17 and venting is possible with side vents (Option Code -V) shown in Figure 18. For horizontal mounted units, the unit is self draining and venting is via a vent screw shown in Figure 19.

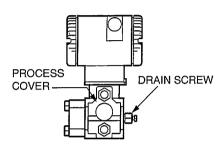


Figure 17. Vertical Mounting - Cavity Draining

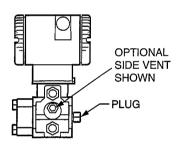


Figure 18. Vertical Mounting - Cavity Venting

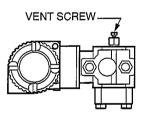


Figure 19. Horizontal Mounting - Cavity Venting

LP1 Low Profile Structure

Sensor cavity venting and draining is provided for both vertical and horizontal mounting. For vertical mounted units, the transmitter is self draining and venting is via a vent screw shown in Figure 20. For horizontal mounted units, the transmitter can simply be 'turned over' (rotated 180 degrees) as shown in Figure 21 to orient the high and low pressure sides in the preferred locations. There is no need to unbolt the process covers. If the transmitter is connected with a

length of impulse piping, such piping should slope up to the transmitter for gas applications and down for liquid applications.

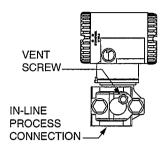


Figure 20. Vertical Mounting - Cavity Venting

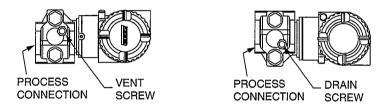


Figure 21. Horizontal Mounting - Cavity Venting and Draining

LP2 Low Profile Structure

The transmitter with LP2 low profile structure had a full-featured vent and drain design with separate vent and drain screws positioned in each cover for complete venting and draining from the sensor cavity when installed in the upright position. See Figure 22.

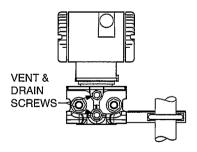


Figure 22. Cavity Venting and Draining

Installation of Flow Measurement Piping

Figure 23 and Figure 24 show typical installations with horizontal and vertical process pipes.

The transmitters are shown below the level of the pressure connections at the pipe (usual arrangement, except for gas flow without a seal liquid), and with filling tees in the lines to the transmitter (for a seal liquid).

If the process fluid being measured must not come in contact with the transmitter, the transmitter lines must be filled with a suitable seal liquid (see procedure in next section). In such a case, the transmitter must be mounted below the level of the pressure connections at the pipe. With steam flow, the lines are filled with water to protect the transmitter from the hot steam. The seal liquid (or water) is added to the lines through the filling tees. To prevent unequal heads on the transmitter, the tees must be at the same elevation (as shown in Figure 23) and the transmitter must be mounted vertically (as shown). If a seal liquid is not required, elbows can be used in place of the tees.

Tighten drain plugs and optional vent screws to 20 N· m (15 lb· ft). Tighten the four process connector bolts to a torque of 61 N· m (45 lb· ft).

Note that the low and high pressure sides of the transmitter are identified by an L-H marking on the side of the sensor above the warning label.

With medium-viscosity seal liquids and/or long transmitter lines, larger valve sizes should be used.

NOTE

- 1. With a horizontal line, pressure connections at the pipe should be at the side of the line. However, with gas flow without a seal liquid, connections should be at the top of the line.
- 2. With a vertical line, flow should be upwards.
- 3. For **liquid** or **steam** flow, the transmitter should be mounted **lower** than the pressure connections at the pipe.
- 4. For gas flow without a seal liquid, the transmitter should be mounted above the pressure connections at the pipe; for gas flow with a seal liquid, the transmitter should be mounted below the pressure connections.
- 5. Foxboro recommends the use of snubbers in installations prone to high levels of fluid pulsations.

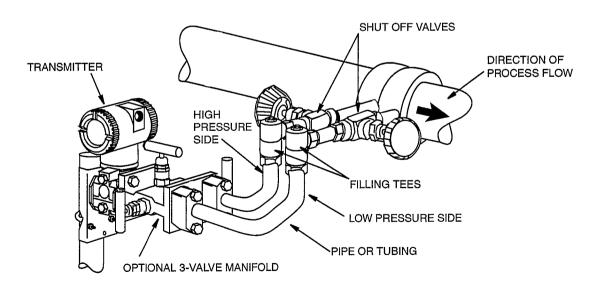


Figure 23. Example of Horizontal Process Line Installation

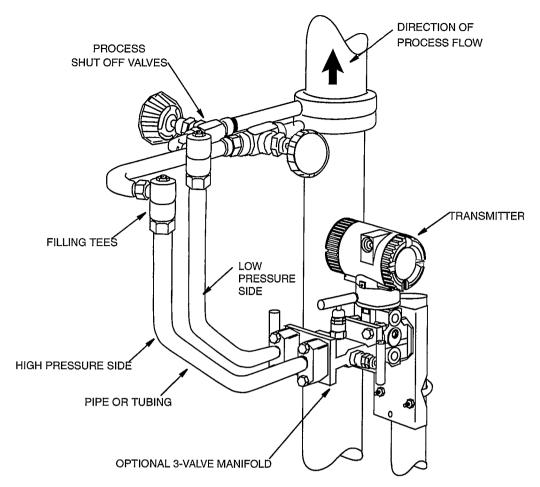


Figure 24. Example of Vertical Process Line Installation

Filling System with Seal Liquid

If the process fluid being measured must not come in contact with the transmitter, the transmitter lines must be filled with a suitable seal liquid. The procedure to do this is as follows:

- 1. If the transmitter is in service, follow the procedure for "Taking a Differential Pressure Xmtr Out of Operation" on page 49.
- 2. Close both process shutoff valves.
- 3. Open all three valves on 3-Valve Manifold.
- 4. Partially open the vent screws on the transmitter until all air has been forced out of the transmitter body and lines. Close the vent screws.
- 5. Refill the tee connections. Replace the plugs and close the bypass valve. Check for leaks.
- **6.** Follow the procedure for "Putting a Differential Pressure Xmtr Into Operation" on page 48.

−∕!\ CAUTION

To prevent loss of seal liquid and contamination of process fluid, never open both process shutoff valves and manifold shutoff valves if the bypass valve is open.

Absolute and Gauge Pressure Transmitter

IAP10, IGP10, IGP25 and IGP50 Transmitters

These pressure transmitters can be directly connected to the process using the 1/2 NPT external thread or mounted to a vertical or horizontal pipe or a surface using the Optional Mounting Set (Model Code Option -M1, M2, M3, or M4) as shown in Figure 25.

- NOTE -

- 1. Do not direct mount these transmitters to the process using the 1/4 NPT internal thread. This thread should only be used to connect to the process when the transmitter is mounted with the optional mounting set.
- 2. Do not mount these transmitters using the conduit connection and optional mounting set when vibration conditions exceed 20 m/s² (2 "g").

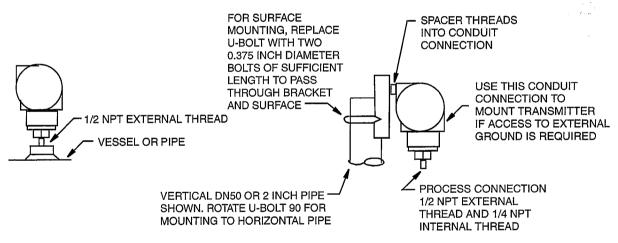


Figure 25. IAP10, IGP10, IGP25, and IGP50 Transmitter Mounting

IAP20 and IGP20 Transmitters

To mount these transmitter to a pipe or surface, use the Optional Mounting Set (Model Code Option -M1 or -M2). Referring to Figure 26, secure the mounting bracket to the transmitter using the two screws provided. Mount the transmitter with the mounting bracket to a vertical or horizontal DN50 or 2-inch pipe. To mount to a horizontal pipe, turn the U-bolt 90° from the position shown in Figure 26. The mounting bracket can also be used for wall mounting by securing the bracket to a wall using the U-bolt mounting holes.

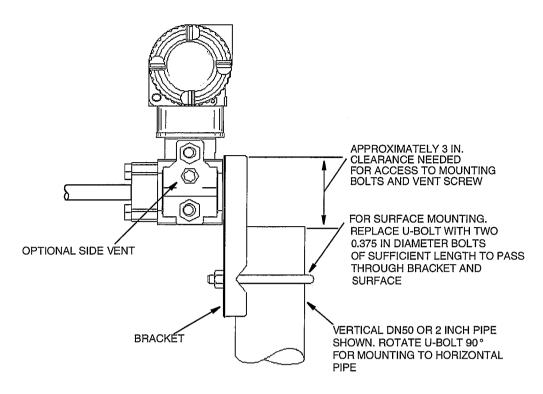


Figure 26. IAP20 and IGP20 Transmitter Mounting

- NOTE ·

When structure codes 78/79 are used (pvdf insert), the process connection must be made directly to the pvdf insert in the process cover.

Typical Transmitter Piping

Figure 27 shows a typical piping application. Calibration supply pressure can be applied via a calibration tee or calibration screw. The lower conduit port can be used as a drain for moisture buildup in terminal compartment. For Model IAP20, IGP20, IGP25, and IGP50 Transmitters, tighten the process connector bolts to a torque of 61 N· m (45 lb· ft) and drain plugs and vent screws to a torque of 20 N· m (15 lb· ft).

- NOTE

- 1. Foxboro recommends the use of snubbers in installations prone to high levels of fluid pulsations.
- 2. IAP10, IGP10, IGP25, and IGP50 Transmitters mounted directly to process piping or a pressure vessel as shown in Figure 27, could require the use of a shutoff valve (shown) to comply with the requirements of ASME Power Piping Code B31.1 and Chemical and Petroleum Piping Code B31.3.

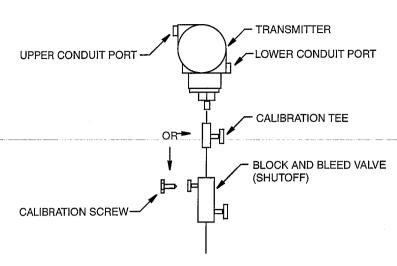


Figure 27. Typical Transmitter Piping (IGP10 shown)

For hot process applications above the operative limits of your transmitter [121 °C (250 °F)], such as steam, additional piping is required to protect the transmitter from the hot process. See Figure 28. The piping is filled with water or process fluid. Mount the transmitter below the pressure connection at the pipe. Although the transmitter is shown mounted vertically, you can also mount it horizontally unless sediment is present. The calibration tee is not required if a calibration screw is used for field calibrations.

If trapped vapor pockets cannot be tolerated in a liquid service and a horizontal process connection is used, install a pipe elbow and vertically position the transmitter with the housing below the process connection.

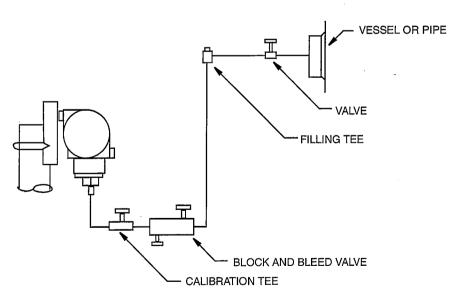


Figure 28. Hot Process Piping

Transmitter with Seals

For information on transmitters with seals, refer to MI 029-369 on your CD-ROM.

Capillary fill fluid specific gravities are given in Table 15 for your convenience.

Fill Fluid Code	Fill Fluid	Specific Gravity at 21°C (70°F)
1	DC200, 10cS, Silicone	0.94
2	FC77 Fluorinert	1.78
3	DC200, 3cS, Silicone	0.90
4	DC704 (HTF) Silicone	1.07
5	Neobee	0.92

Table 15. Capillary Fill Fluid Specific Gravities

Positioning the Housing

The transmitter housing (topworks) can be rotated up to one full turn in the counterclockwise direction when viewed from above for optimum access to adjustments, display, or conduit connections.



If the electronics housing is removed for any reason, it must be hand tightened fully. Then engage the set screw until it bottoms out and back it off 1/8th turn. See Figure 29. Fill the set screw recess with red lacquer (Foxboro Part number X0180GS or equivalent). The housing then may be rotated up to one full turn in a counterclockwise direction for optimum access to adjustments.

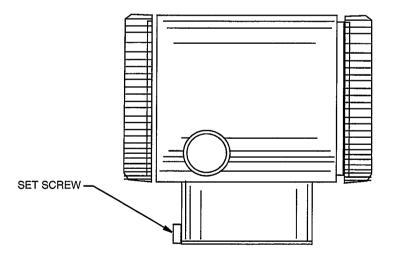


Figure 29. Housing Set Screw Location

Positioning the Display

The display (optional in some models) can be rotated within the housing to any of four positions at 90° increments. To do this with the optional removable display, grasp the two tabs on the

display and rotate it about 10° in a counterclockwise direction. Pull out the display. Ensure that the O-ring is fully seated in its groove in the display housing. Turn the display to the desired position, reinsert it in the electronics module, aligning the tabs on the sides of the assembly, and twist it in the clockwise direction. With electronics versions -A and -V, the display is a standard part of the electronics module and can be rotated by repositioning the entire module, using the mounting screws.

-ACAUTION

Do not turn the display more than 180° in any direction. Doing so could damage its connecting cable.

Setting the Write Protect Jumper

- NOTE

This feature only applies to transmitters with FoxCom (Code -D), HART Version 4.n (Code -T), and FOUNDATION fieldbus (Code -F) electronics.

If your transmitter has write protection capability, it means that the external zero, local display, and remote communications can be prevented from writing to the electronics. Write protection is set by moving a jumper that is located in the electronics compartment behind the optional display. To activate write protection, remove the display as described in the previous section, then remove the jumper or move it to the lower position as shown on the exposed label. Replace the display.

Cover Locks

Electronic housing cover locks, shown in Figure 30, are provided as standard with certain agency certifications and as part of the Custody Transfer Lock and Seal option. Screw the cover locks into the housing to unlock the covers. To reset the locks, unscrew them until the locks extend into the cover serrations to prevent cover rotation.

Wiring

The installation and wiring of your transmitter must conform to local code requirements.

- NOTE

- 1. Review suggested wiring practices as described in MI 020-350 to ensure proper communications capability and to minimize the effects of RFI.
- 2. Although surge protection is standard, Foxboro recommends the use of transient/surge protection in installations prone to unusually high levels of electrical transients and surges.

For access to the field terminals, thread the cover lock (if present) into the housing to clear the threaded cover and remove the cover from the field terminals compartment as shown in Figure 30. Note that the embossed letters **FIELD TERMINALS** identify the proper compartment.

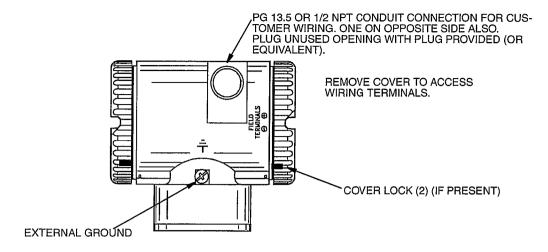


Figure 30. Accessing Field Terminals

4 to 20 mA Output Signal (Model Codes -A, -D, and -T)

The field terminals on a transmitter with a 4 to 20 mA output signal are shown in Figure 31.

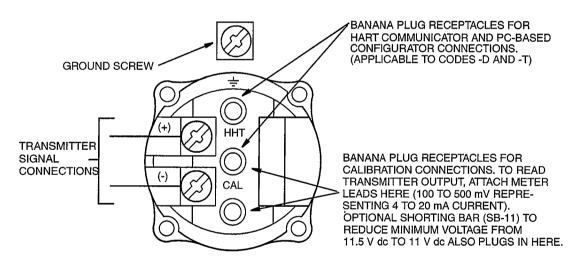


Figure 31. Identification of Field Terminals

The transmitter is equipped with an internal ground connection within the field wiring compartment and an external ground connection at the base of the electronics housing. To minimize galvanic corrosion, place the wire lead or terminal between the captive washer and loose washer on the external ground screw.

When wiring a transmitter with 4 to 20 mA output signal, the supply voltage and loop load must be within specified limits. The supply output load vs. voltage relationship is:

 $R_{MAX} = 47.5$ (V - 11.5) and is shown in Figure 32.

The relationship when the optional shorting bar is used is: $R_{MAX} = 46.8 \text{ (V - 11)}.$

Any combination of supply voltage and loop load resistance in the shaded area can be used. To determine the loop load resistance (transmitter output load), add the series resistance of each component in the loop, excluding the transmitter. The power supply must be capable of supplying 22 mA of loop current.

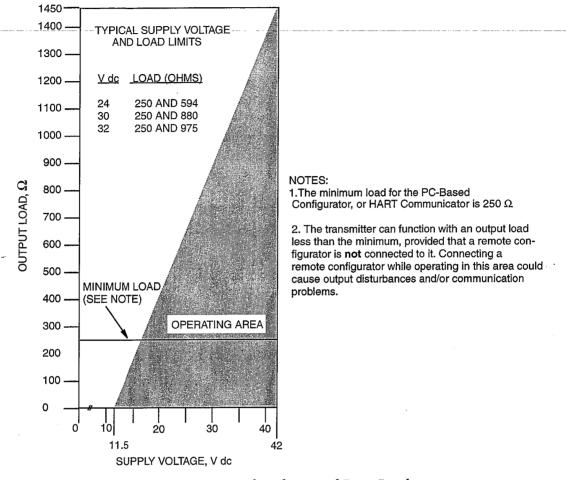


Figure 32. Supply Voltage and Loop Load

Examples:

- 1. For a loop load resistance of 880 Ω , the supply voltage can be any value from 30 to 42 V dc.
- 2. For a supply voltage of 24 V dc, the loop load resistance can be any value from 250 to 594 Ω with remote communications and zero to 594 Ω without remote communications.

To wire one or more transmitters to a power supply, proceed with the following steps.

- 1. Remove the cover from the transmitter field terminals compartment.
- 2. Run signal wires (0.50 mm² or 20 AWG, typical) through one of the transmitter conduit connections as shown in Figure 30. Use twisted pair to protect the 4 to 20 mA output and/or remote communications from electrical noise. Maximum recommended length for signal wires is 1800 m (6000 ft)

- NOTE -


Do not run transmitter wires in same conduit as mains (ac power) wires.

- 3. If shielded cable is used, ground (earth) the shield at the receiver **only**. Do not ground the shield at the transmitter. Cut or tape the shield so that it cannot contact the metal housing.
- 4. Plug the unused conduit connection with the metal plug provided (or equivalent). To maintain specified explosion proof and dust-ignition proof protection, the plug must engage a minimum of five full threads.
- 5. Connect a ground wire to the ground terminal in accordance with local practice.

-/ CAUTION -

If the signal circuit must be grounded, it is preferable to do so at the negative terminal of the dc power supply. To avoid errors resulting from ground loops or the possibility of short-circuiting groups of instruments in a loop, there should be only one ground in a loop.

- 6. Connect the power supply and receiver loop wires to the "+" and "-" terminal connections shown in Figure 31.
- 7. Connect receivers (such as controllers, recorders, indicators) in series with power supply and transmitter as shown in Figure 33.
- 8. Install the cover onto the transmitter. Turn covers to seat O-ring into the housing and then continue to hand tighten until the cover contacts the housing metal-to-metal. If cover locks are present, refer to "Cover Locks" on page 35.
- 9. If wiring additional transmitters to the same power supply, repeat Steps 1 through 8 for each additional transmitter. The setup with multiple transmitters connected to a single power supply is shown in Figure 34. Refer to MI 020-350 for details.
- 10. The PC-Based Configurator can be connected in the loop between the transmitter and the power supply as shown in Figure 33 and Figure 34 (not applicable with Version -A). Note that a minimum of 250 Ω must separate the power supply from the PC-Based Configurator or HART Communicator).

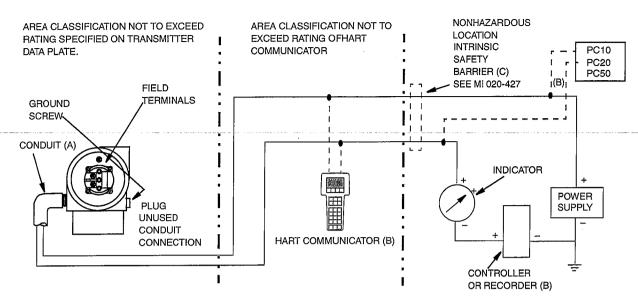

- (A) RUN CONDUIT DOWN TO AVOID MOISTURE BUILDUP IN TERMINALS COMPARTMENT.
- (B) THERE MUST BE AT LEAST 250 Ω TOTAL RESISTANCE BETWEEN THE PC-BASED CONFIGURATOR OR HART COMMUNICATOR AND THE POWER SUPPLY).
- (C) TRANSMITTERS WITH -A ELECTRONICS ARE NOT DESIGNED FOR USE WITH INTRINSIC SAFETY BARRIERS.

WARNING

DIFFERENT VERSIONS OF THE HART COMMUNICATOR MAY BE SUITABLE FOR DIFFERENT CLASSIFICATIONS (FOR EXAMPLE, DIVISION 1 OR DIVISION 2). CHECK THE RATING OF THE VERSION YOU HAVE BEFORE USING IT IN A HAZARDOUS AREA. LOCATING OR CONNECTING A HART COMMUNICATOR IN A HAZARDOUS AREA FOR WHICH IT IS NOT CERTIFIED COULD RESULT IN AN EXPLOSION.

Figure 33. Loop Wiring 4 to 20 mA Output Transmitters

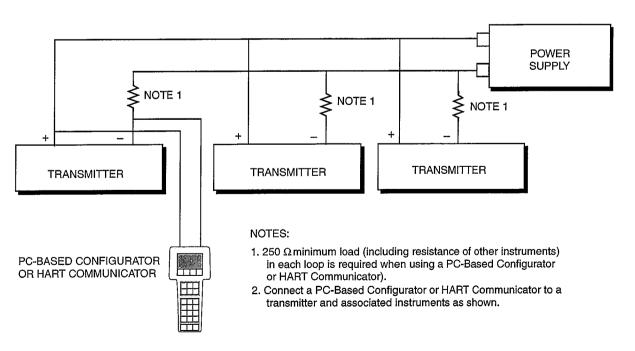


Figure 34. Wiring Several 4 to 20 mA Transmitters to a Common Power Supply

The transmitters with FoxCom (-D) and HART (-T) communications also communicate digitally with the PC-Based Configurator and the HART Communicator respectively at distances up to 1800 m (6000 ft). Communication between the remote configurator and the transmitter does not disturb the 4 to 20 mA output signal.

HART Multidrop Wiring (Model Code -T)

"Multidropping" refers to the connection of several transmitters to a single communications transmission line. Communications between the host computer and the transmitters takes place digitally with the analog output of the transmitter deactivated. With the HART communications protocol, up to 15 transmitters can be connected on a single twisted pair of wires or over leased telephone lines.

The application of a multidrop installation requires consideration of the update rate necessary from each transmitter, the combination of transmitter models, and the length of the transmission line. Multidrop installations are not recommended where intrinsic safety is a requirement. Communication with the transmitters can be accomplished with any HART compatible modem and a host implementing the HART protocol. Each transmitter is identified by a unique address (1-15) and responds to the commands defined in the HART protocol.

Figure 35 shows a typical multidrop network. Do not use this figure as an installation diagram. Contact the HART Communications Foundation (telephone 512-794-0369 in the U.S.) with specific requirements for multidrop applications.

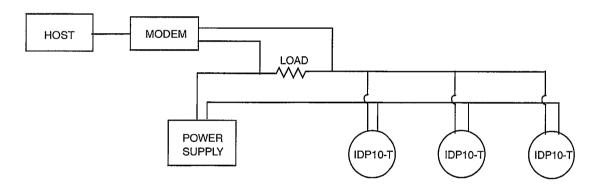


Figure 35. Typical Multidrop Network

The HART Communicator can operate, configure, and calibrate transmitters with HART communication protocol in the same way as it can in a standard point-to-point installation.

Transmitters with HART communication protocol are set to poll address 0 (**POLLADR 0**) at the factory, allowing them to operate in the standard point-to-point manner with a 4 to 20 mA output signal. To activate multidrop communication, the transmitter address must be changed to a number from 1 to 15. Each transmitter must be assigned a unique number on each multidrop network. This change deactivates the 4 to 20 mA analog output.

1 to 5 V dc Output Signal (Model Code -V)

The field terminals on a transmitter with a 1 to 5 V dc output signal are shown in Figure 36.

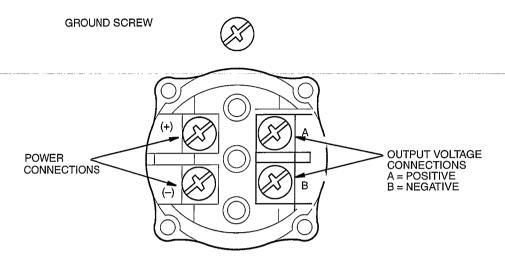


Figure 36. Identification of Field Terminals

The transmitter is equipped with an internal ground connection within the field wiring compartment and an external ground connection at the base of the electronics housing. To minimize galvanic corrosion, place the wire lead or terminal between the captive washer and loose washer on the external ground screw.

Power Supply Voltage and Current

The power supply voltage across the transmitter input terminals can be any value between 9 and 15.5 V dc and the power supply must be capable of supplying 3 mA of current under all conditions. Verify that the power supply loop load resistance and source impedance allow at least 9 V dc across the transmitter input terminals with a current draw of 3 mA.

Output Load

The receiver input impedance can be any value between 1 and 10 $\text{M}\Omega$

Three or Four Wire Connections

The transmitter is supplied with a four-wire terminal block with the two negative terminals (- and B) electrically connected internally. This means that the transmitter can be wired with either three wires for wiring economy or four wires for maximum accuracy.

For relatively short wiring runs having low resistance, three-wire connections as shown in Figure 37 can be used to minimize wiring costs. However, a voltage drop in the common lead carrying the power supply current causes an error in the 1 to 5 V dc signal.

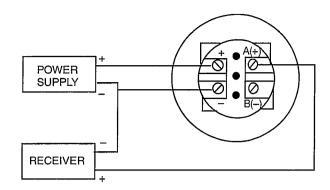


Figure 37. Three-wire Connection

For wiring runs with high resistance due to long lengths or other reasons) or for maximum accuracy, a four-wire connection as shown in Figure 38 can be used to provide input-output isolation. With four-wire configuration, voltage drop in the power supply loop does not affect measurement accuracy.

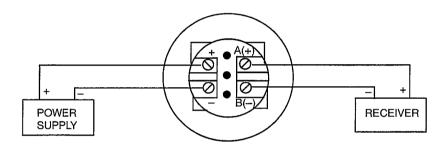


Figure 38. Four-wire Connection

To wire a transmitter, proceed with the following steps.

- 1. Screw in cover lock (if present) and remove the field terminals compartment cover by rotating it counterclockwise.
- 2. Run the supply voltage and output wires (0.50 mm² or 20 AWG, typical) through one of the transmitter conduit connections as shown in Figure 30. If four-wire connection is used, use twisted single pair on the output side to protect the 1 to 5 V dc output from electrical noise.

- NOTE

Do not run transmitter wires in same conduit as mains (ac power) wires.


- 3. If shielded cable is used, ground the shield at the receiver **only**. Do **not** ground the shield at the transmitter. Cut and/or tape the shield so it cannot contact the metal housing.
- 4. Plug unused conduit connection with the metal plug provided (or equivalent). To maintain specified explosion proof and dust-ignition proof protection, plug must engage a minimum of five full threads. Thread sealant is recommended.

5. Connect an ground wire to the ground terminal in accordance with local practice.

If the output circuit must be gro

If the output circuit must be grounded, it is preferable to do so at the negative terminal of the receiver. To avoid errors resulting from ground loops or the possibility of short-circuiting groups of instruments in a loop, there should be only one ground in a loop.

- 6. Connect the power supply and receivers (such as controllers, recorders, indicators) as shown in Figure 37 or Figure 38. Typical loop wiring is shown in Figure 39.
- 7. Install the cover onto the transmitter. Turn covers to seat O-ring into the housing and then continue to hand tighten until the cover contacts the housing metal-to-metal. If cover locks are present, refer to "Cover Locks" on page 35.
- 8. If wiring additional transmitters to the same power supply, repeat Steps 1 through 7 for each additional transmitter. The setup with multiple transmitters connected to a single power supply is shown in Figure 40.
- 9. For installations with long runs, Foxboro recommends using two twisted pair with one pair connected to the power supply terminals and one pair connected to the output terminals. The two twisted pair can be in individual shields or a common shield with the shield connected to the receiver. The shield must **not** be connected to the transmitter.

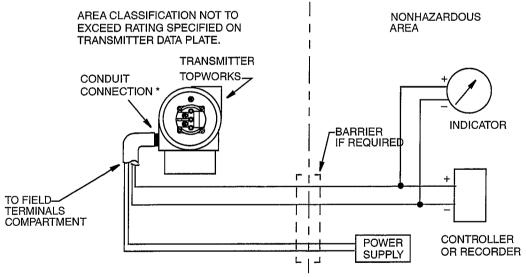

^{*} RUN CONDUIT DOWN TO AVOID MOISTURE BUILDUP IN FIELD TERMINALS COMPARTMENT.

Figure 39. Loop Wiring (four-wire connection shown)

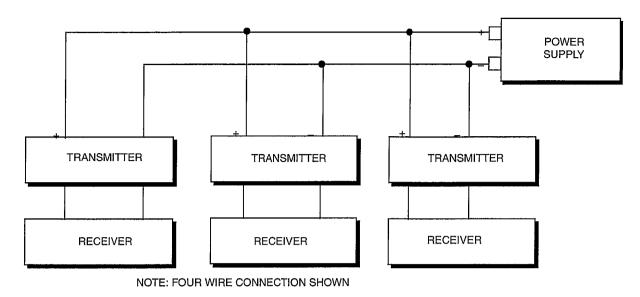


Figure 40. Wiring Several Transmitters to a Common Power Supply

FoxCom Communications Protocol (Model Code -D)

The transmitter can be configured to send its pressure measurement to the I/A Series system as a digital signal using FoxCom protocol. Remote communication between the transmitter and the PC-Based Configurator or any I/A Series system console can be accommodated up to 600 m (2000 ft) away from the FBM.

- NOTE

Ensure that the transmitter output is configured for "digital output" before attaching it to an FBM that will be communicating in only the digital mode. Also, make sure that Device Name is the same as the letterbug used for that channel in the I/A Series System, or verify that the transmitter device name is set to its default description, DevNam, before installation.

Transmitters with FoxCom digital output signal connect to an I/A Series system. This procedure identifies wire terminations in the transmitter and in the I/A Series system enclosure. For other system wiring details, refer to the Installation Instructions provided with the I/A Series system.

The maximum total resistance for each transmitter loop is 420 Ω For example, if an intrinsically safe barrier with a resistance of 340 Ω is used, the maximum wire resistance is 80 Ω Maximum recommended length for field wire is 600 m (2000 ft). Transmitter power is supplied by the I/A Series FBM.

- 1. Remove the cover from the transmitter field terminal compartment.
- 2. Run signal wires (0.50 mm² or 20 AWG, typical) through one of the transmitter conduit connections as shown in Figure 41. Use twisted pair to protect the digital output and/or remote communications from electrical noise. Screened (shielded) cable may be required in some locations.

- NOTE ·

Do not run transmitter wires in same conduit as mains (ac power) wires.

- 3. If shielded cable is used, ground the shield at the field enclosure only. Do not ground the shield at the transmitter.
- 4. Plug unused conduit connection with the PG 13.5 or 1/2 NPT metal plug provided (or equivalent). To maintain specified explosion proof and dust-ignition proof protection, plug must engage a minimum of five full threads.

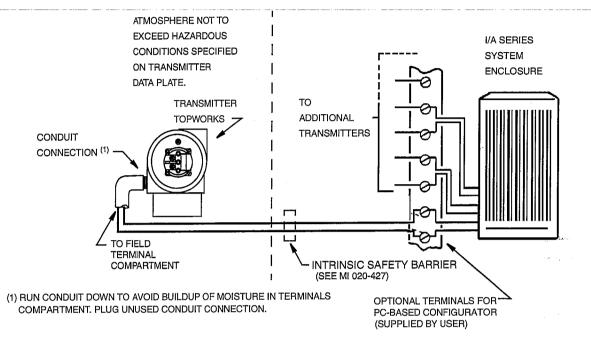


Figure 41. Typical Transmitter Wiring to an I/A Series System

5. Connect an ground wire to the ground terminal in accordance with local practice. Ground terminal is shown in Figure 31.

To avoid errors resulting from ground loops or the possibility of short-circuiting groups of instruments in a loop, use only one ground in a loop.

- 6. Connect the signal wires to the transmitter "+" and "-" terminal connections shown in Figure 31.
- 7. The PC-Based Configurator can be connected via banana plugs to the top two receptacles (designated **HHT**) on the terminal block in the field terminal compartment as shown in Figure 31 or any other convenient location in the loop (subject to hazardous location restrictions). For example, to communicate with several transmitters from a single location, connect each pair of signal wires to a separate pair of terminals. The PC-Based Configurator can then be easily disconnected from one loop and connected to another.
- 8. Reinstall the cover on the transmitter. Turn the cover to seat the O-Ring into the housing and continue to hand tighten until the cover contacts the housing metal-to-metal.

FOUNDATION Fieldbus Communication (Model Code -F)

Do not run transmitter wires in the same conduit as mains (ac power) wires.

Use FOUNDATION fieldbus approved cable (multi-core, shielded, twisted pair cable) to protect remote communications from electrical noise. Refer to MI 020-360 or FOUNDATION fieldbus Application Guide AG-140, Rev 1.0 or later.

Power supply (a FOUNDATION fieldbus Power Supply Module) must be capable of providing at least 14 mA for each transmitter connected.

A summary of the voltage requirements is listed in Table 16.

Table 16. Minimum Supply Voltage Requirements

Minimum Supply Voltage	9 V
Recommended Supply Voltage	24 V
Maximum Supply Voltage	32 V

The transmitter is equipped with an internal ground connection within the field wiring compartment and an external ground connection at the base of the electronics housing. To minimize galvanic corrosion, place the wire lead or terminal between the captive washer and loose washer on the external ground screw. Ground the shield at one place per segment **only**.

Refer to Figure 42 for wiring diagram.

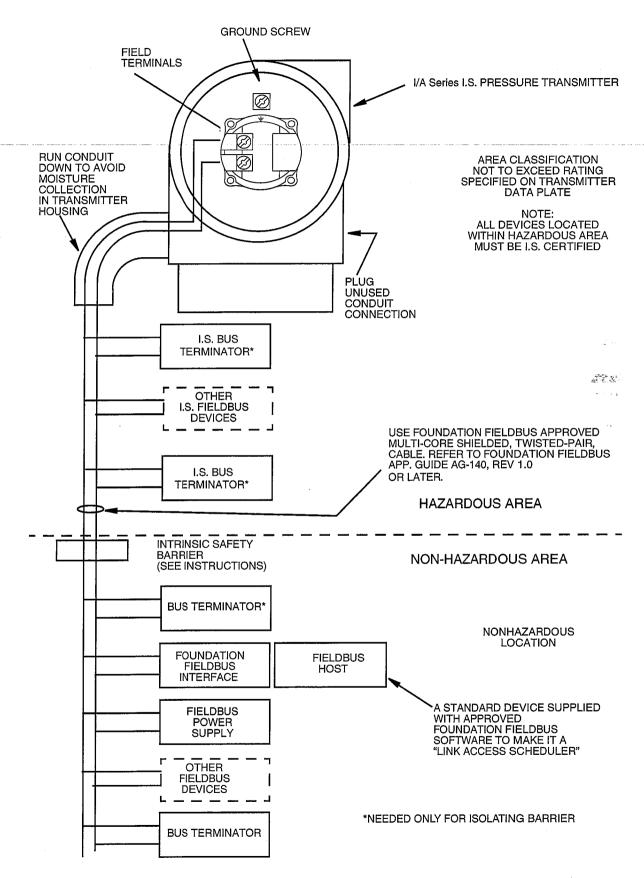



Figure 42. Wiring Diagram of Typical FOUNDATION Fieldbus Transmitter Installation

Installing Fieldbus Software (Model Code -F)

Foxboro I/A Series FOUNDATION fieldbus transmitters are shipped with a 3.5-inch diskette that contains specific device information and other files needed to configure the transmitters from a FOUNDATION fieldbus host. The files included on the Foxboro DD diskette are:

Filename	Description
readme.doc	A WORD file with DD installation instructions
reademe.txt	A text file with DD installation instructions (for users without MS-WORD).
xxyy.ffo where xx = Device Rev. (Parameter 12 in Resource Block) yy = DD Rev. (Parameter 13 in Resource Block)	DD binary file
xxyy.sym	DD symbol file
IASPT10.DRF	Capability file

Set up the following directory structure for the DD files of a device on the host computer. According to the FOUNDATION specification, the device description files must be present in the appropriate directories as described below.

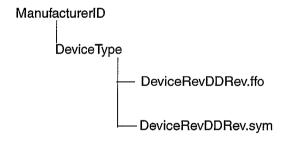

where *.ffo is the DD binary file and *.sym is the symbol file.

The Manufacturer ID for Foxboro is 385884 and the Device Type for this transmitter is BA2E.

- NOTE If you lose your DD files, you can get them from the Invensys Foxboro website http://www.foxboro.com/m&i/tools/dd/index.htm.

Putting a Differential Pressure Xmtr Into Operation

The following procedure explains how to sequence the valves in your flow measurement piping or optional bypass manifold to ensure that your transmitter is not overranged and that seal liquid is not lost. Refer to Figure 23 or Figure 24.

atio	on MI 020-359 —
	NOTE
1.	Make sure that both upstream and downstream manifold valves are closed.
2.	Make sure that bypass valve is open.
3.	Slowly open the upstream manifold valve.
4.	Close the bypass valve.
5.	Slowly open the downstream manifold valve.
ns	g a Differential Pressure Xmtr Out of Ope

peration Taki

The following procedure explains how to sequence the valves in your flow measurement piping or optional bypass manifold to ensure that your transmitter is not overranged and that seal liquid is not lost. Refer to Figure 23 or Figure 24.

- NOTE -Procedure assumes that Process shutoff valves are open.

- 1. Close the downstream manifold valve.
 - 2. Close the upstream manifold valve.
 - 3. Open the bypass valve.
 - 4. Carefully open the vent screw to release any residual pressure before disconnecting lines.

− <u></u> WARNING —
WARNING —
When venting pressure from the transmitter, wear suitable protective equipment to
prevent possible injury from process material, temperature, or pressure.

3. Operation Using Local Display

- NOTE For analog output versions (electronics codes -A or -V), all configuration must be
done from the optional local display. For intelligent versions (electronics codes -D,
-T, and -F), you can configure most parameters using the local display. However, for more complete configuration capability, use the HHT, PC-Based Configurator, or HART Communicator.
A local display, as shown in Figure 43, has two lines of information. The upper line is a 5-digit numeric display (4-digit when a minus sign is needed and 4-digit for electronics versions -A and
-V); the lower line is an 7-digit alphanumeric display. The display provides local indication of
measurement information. The primary (M1) measurement is normally displayed. To view the
secondary (M2) measurement on intelligent versions, press the Enter button while in normal

The display also provides a means for performing calibration and configuration, viewing the database, and testing the display via the 2-button keypad. You can access these operations by means of a multi-level menu system. Entry to the Mode Select menu is made (from normal operating mode) by pressing the **Next** button. You can exit this menu, restore your prior calibration or configuration, and return to the normal operating mode at any time by going to **Cancel** and pressing the **Enter** button.

interrupted, the display reverts to the M1 display.

again.

operating mode. Press the **Next** or **Enter** button to return to the primary measurement. If left in M2 display, an M2 message blinks in the lower right of the display. If power to the transmitter is

NOTE During calibration or configuration, a single change could affect several parameters. For this reason, if an entry is Entered in error, re-examine the entire data base or use the Cancel feature to restore the transmitter to its starting configuration and begin

The following items can be selected from this menu: Calibration (**CALIB**). Configuration (**CONFIG**), Viewing the database (**VIEW DB**), and Testing the display (**TST DSP**). The top level structure diagram is shown in Figure 44.

- NOTE -	
VIEW DB is not applicable to Code -A and -V transmitters.	


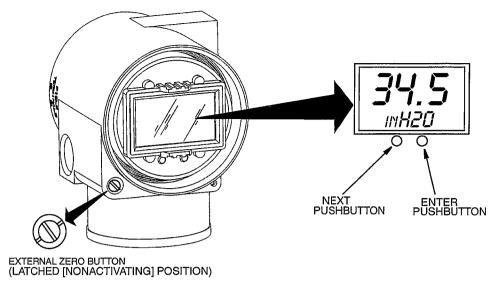


Figure 43. Local Display Module

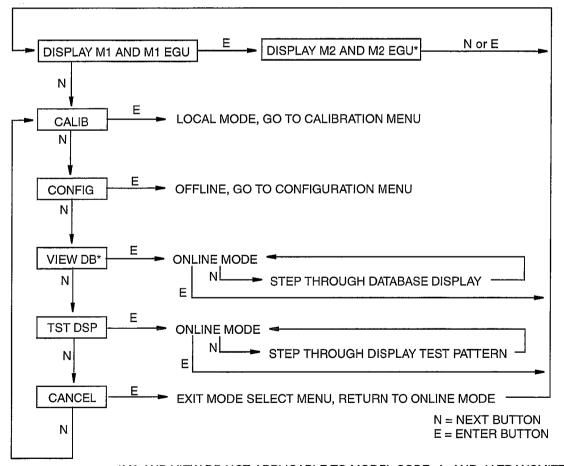

*M2 AND VIEW DB NOT APPLICABLE TO MODEL CODE -A, AND -V TRANSMITTERS

Figure 44. Top Level Structure Diagram

- NOTE

In the Configuration menu and during adjustment of 4 and 20 mA (or 1 to 5 V dc) in the Calibration menu, the milliampere (or voltage) output does not reflect live measurement values. Also, during Calibration and Configuration menu operations, the I/A Series system identifies all transmitter measurements as **BAD** because the transmitter is not in the online mode.

Moving Through the Menu Structure

The general procedure for moving through the menu structure is to use the **Next** button to select an item and the **Enter** button to specify your selection. See Figure 45 for an example of a typical menu structure. The example used is the beginning of the Configuration menu for a transmitter with FoxCom Communications.

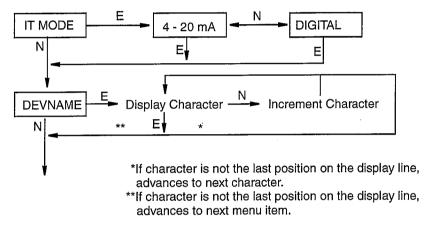


Figure 45. Typical Menu Structure

In Figure 45, at the display **IT MODE**, press **Enter**. Use the **Next** button to select **4-20 mA** or **Digital** and then **Enter** to specify your selection. The display advances to **DEVNAME**. Press **Enter**. Follow the general procedure below to select the letters for your device name. The procedure to enter letters is similar to that for entering numerical values.

Entering Numerical Values

The general procedure for entering numerical values in Calibration and Configuration is as follows:

- 1. At the appropriate prompt press the **Enter** button. The display shows the last (or default) value with the first digit flashing.
- 2. Use the **Next** button to select the desired first digit, then press the **Enter** button. Your selection is entered and the second digit flashes.
- 3. Repeat Step 2 until you have created your new value. If the number has less than five characters, use leading or trailing zeros for the remaining spaces. When you have configured the fifth space, the display prompts you to place the decimal point (SET DP).
- 4. Move the decimal point with the **Next** button until it is where you want it and press the **Enter** button.

5. The display advances to the next menu item.

- NOTE -

- 1. The decimal point may not be placed directly after the first digit. For example, you can not enter a value as 1.2300; you must enter it as 01.230.
- 2. The decimal position is identified by flashing except at the position after the fifth digit. At that position (representing a whole number), the decimal point is assumed.

Zeroing from the LCD Indicator Pushbuttons or Optional External Zero Button

Depending on the electronics version specified and whether or not the optional external zero adjust is specified, the transmitter can be zeroed with either the Lower Range Value pressure applied (CAL LRV) or zero pressure applied (CAL AT0).

The value of LRV pressure is settable and stored in the transmitter database. Apply a pressure equal to this value before activating CAL LRV.

CAL ATO allows easy zeroing of transmitters with non-zero based ranges. Before activating CAL ATO, gauge pressure transmitters must be vented to atmosphere and differential pressure transmitters must have zero differential pressure applied. Do **not** use CAL ATO with remote seal transmitters having seals at different elevations from the transmitter or with vented absolute pressure transmitters.

The following table shows the zeroing functions supported by each electronics version.

		Electronics Versions	
Interface Method	D, F, and T(a)	A and V	T(b)
LCD Pushbuttons(c)	CAL LRV and CAL AT0	CAL LRV and CAL AT0	CAL LRV(d)
External Zero Option(e)	CAL LRV and CAL AT0	CAL AT0	CAL LRV(d)

- (a) Electronics Model Code -T, version 4.n
- (b) Electronics Model Code -T, version 2.n
- (c) Function selected from CALIB menu on LCD Indicator.
- (d)CAL LRV is labeled ZERO on the LCD Indicator of -T version 2.n transmitters.
- (e)On transmitters with Dual Function External Zero (Versions -D, -F, and -T version 4.n transmitters), the zeroing is done by depressing the zero button:
 - < 3 seconds = CAL AT0
 - > 5 seconds = CAL LRV

Using the Optional External Zero Button:

An external zero adjustment mechanism in the electronics housing (see Figure 43) allows zeroing without removing the electronics compartment cover.

Zeroing is accomplished by depressing the zero button after it is unlatched.

Unlatch the zero button by turning the screw 90° counterclockwise so that the screwdriver slot lines up with the two holes in the face of the adjacent part. Do not push the button in with the screwdriver until ready to perform the zeroing operation.

Zeroing from the HHT or HART Communicator

The electronics version -D transmitter can be zeroed from the HHT and the electronics version -T from the HART Communicator. Both transmitters can be zeroed with any applied pressure by entering the value of the applied pressure (one-point calibration).

- NOTE

The HHT (Revision level H or earlier) does not communicate with IGP25-D, IGP50-D, IDP25-D, and IDP50-D (FoxCom) Transmitters. For additional information, contact Foxboro.

Also, using the Zero Trim function on the HART Communicator provides the same function as a CAL ATO. To do this, the following requirements apply:

♦ Differential Pressure Transmitter

H and L sides must be equalized

• Gauge Pressure Transmitter

Must be vented to atmosphere

• Absolute Pressure Transmitter


Full vacuum must be applied

— NOTE

Do **not** perform a Zero Trim procedure on an absolute pressure transmitter unless full vacuum is applied. The more common procedure for zeroing an absolute pressure transmitter is to vent it to atmosphere and do a one-point calibration, entering the current value of barometric pressure.

3. Operation Using Local Display

4. Calibration Diagram

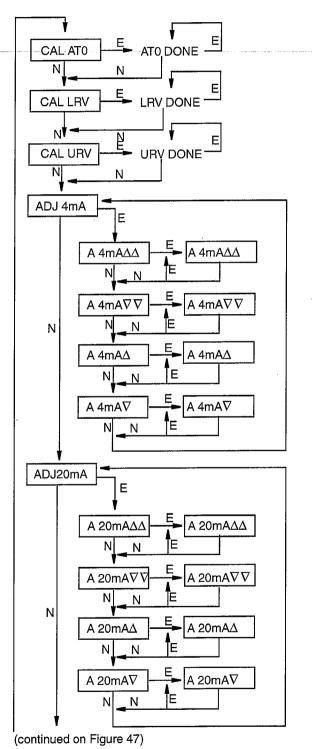

E = ENTER N = NEXT

NOTES:

- 1. CAL ATO, CAL LRV, and CALURV apply to transmitters with FoxCom communications (Code -D), HART communications (Code -T, Version 4.0), 4 to 20 mA Output (Code -A), and 1 to 5 V dc Output (Code -V). Transmitters with HART communications (Code -T, Version 2.0) do not have CAL ATO and use ZERO and SPAN in place of CAL LRV and CAL URV.
- 2. For Code -V transmitters, substitute 1 V dc for 4 mA and 5 V dc for 20 mA throughout the diagram.
- 3. This diagram does **not** apply to transmitters with FOUNDATION fieldbus communication (Code -F). For calibration information on these transmitters, see the CD-ROM.
- 4. CAL AT0, CAL LRV, and CAL URV require application of appropriate pressure before pressing ENTER. For reranging without pressure, see the next page.

Figure 46. Calibration Structure Diagram

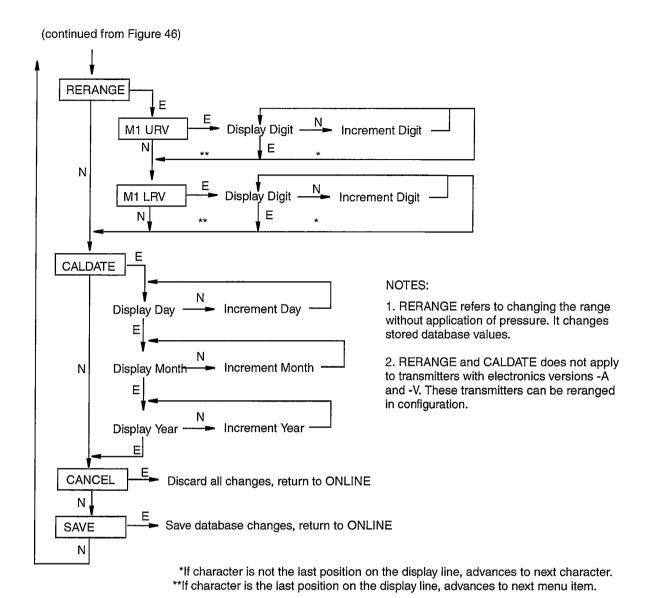


Figure 47. Calibration Structure Diagram (Continued)

5. Configuration Diagrams

FoxCom Communications (Code -D)


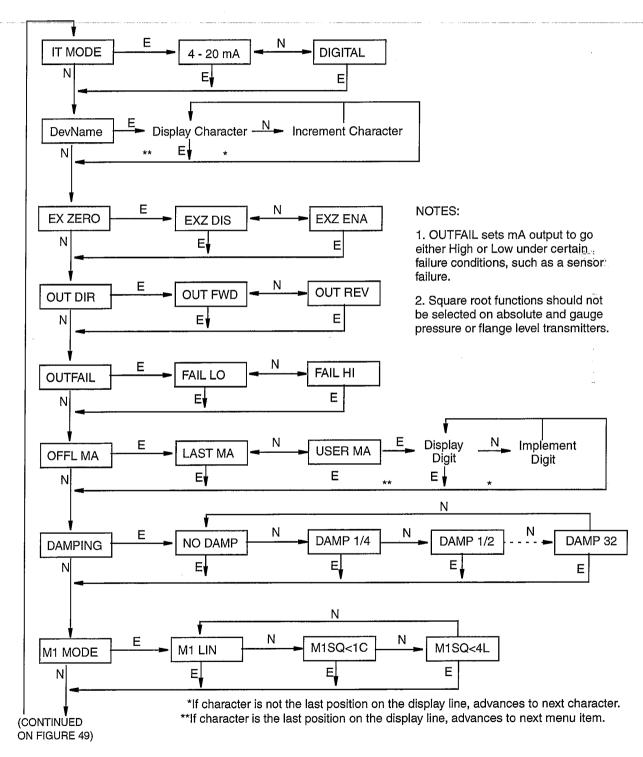


Figure 48. FoxCom Configuration Structure Diagram

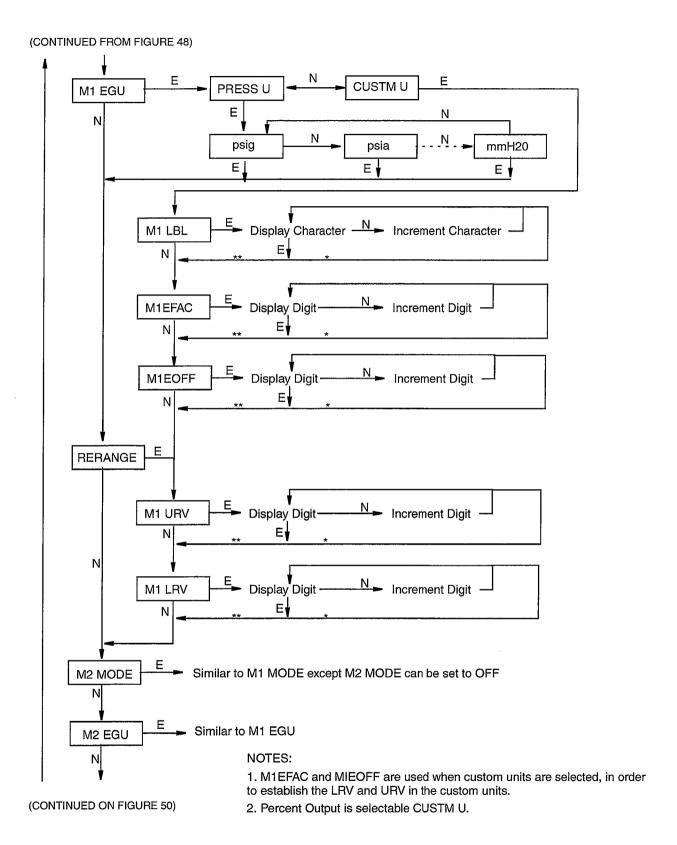

^{*}If character is not the last position on the display line, advances to next character.
**If character is the last position on the display line, advances to next menu item.

Figure 49. FoxCom Configuration Structure Diagram (Continued)

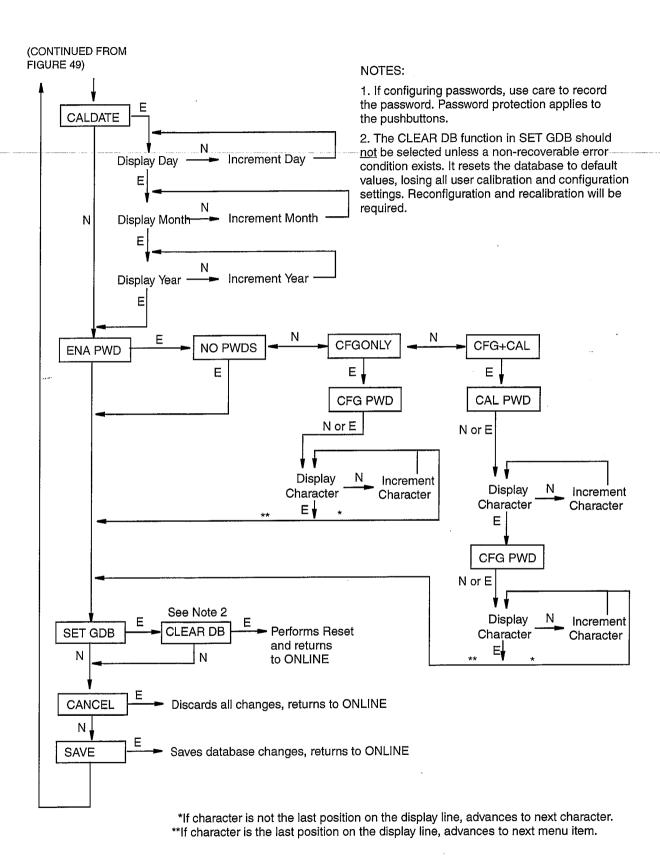


Figure 50. FoxCom Configuration Structure Diagram (Continued)

HART Communications (Code -T)

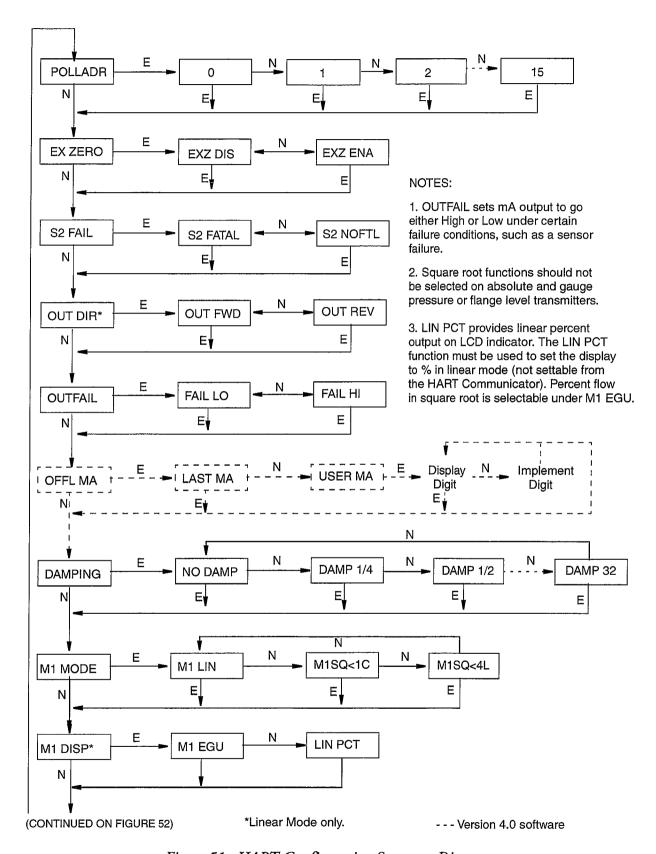


Figure 51. HART Configuration Structure Diagram

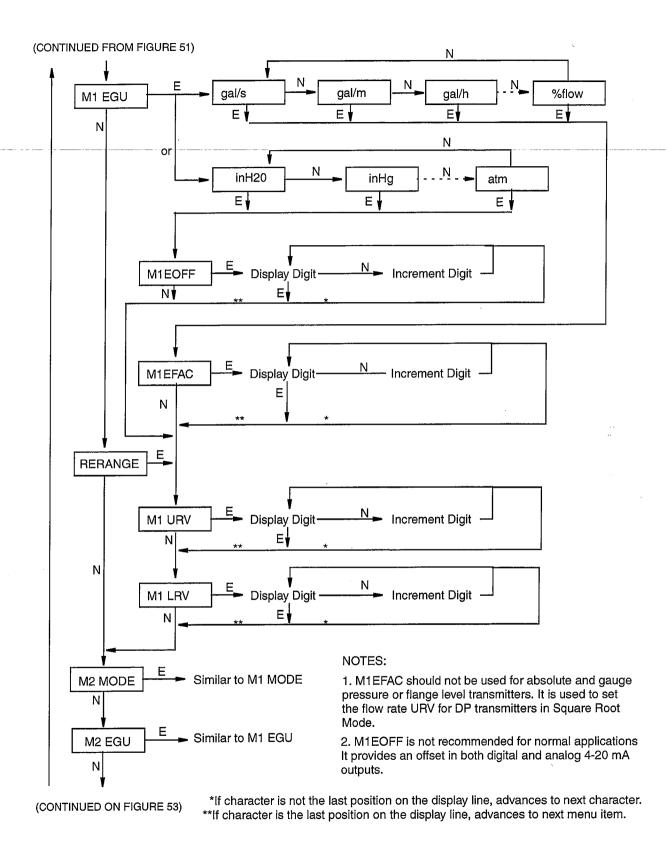


Figure 52. HART Configuration Structure Diagram (Continued)


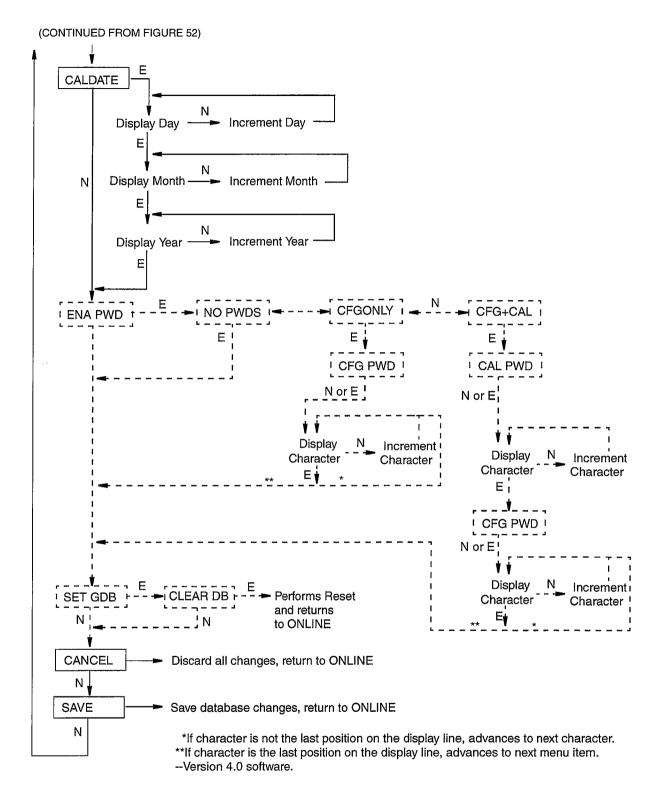


Figure 53. HART Configuration Structure Diagram (Continued)

FOUNDATION Fieldbus Communications (Code -F)

Refer to the CD-ROM with your transmitter.

4 to 20 mA (Code -A) and 1 to 5 V dc (Code -V)

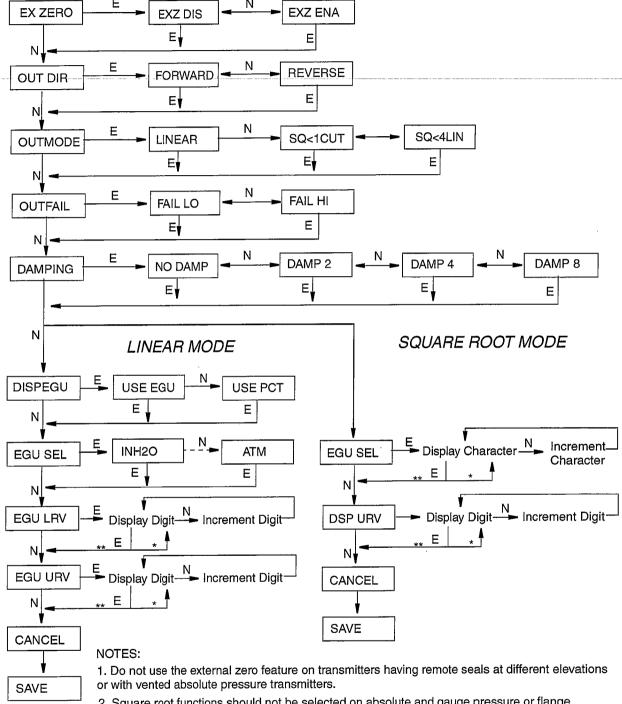

- 2. Square root functions should not be selected on absolute and gauge pressure or flange level transmitters.
- 3. Display in Linear Mode may be pressure units of calibrated range or percent (no custom units).
- 4. Display in Square Root Mode requires configuration of flow units or percent and allows user entry of URV in flow units.
 - *If character is not the last position on the display line, advances to next character.
 - **If character is the last position on the display line, advances to next menu item.

Figure 54. Configuration Structure Diagram (Code -A and -V)

Index

	A Absolute Pressure Transmitter Mechanical Installation 31
]	Calibration Diagram 57 Configuration Diagrams 59 Cover Locks 35
	 D Differential Pressure Transmitter Mechanical Installation 19 Putting into Operation 48 Taking Out of Operation 49
	Entering Numerical Values 53
	F Fieldbus Software, Installing 48 Foundation fieldbus Communication, Wiring for 46 FoxCom Communications Protocol, Wiring for 44
]	G Gauge Pressure Transmitter Mechanical Installation 31
	H HART Multidrop Wiring 40
	L Local Display 51
	M Mechanical Installation 19 Menu Structure, Moving through the 53
	Pipe Mounting 22

Positioning Housing 34 Positioning Optional Display 34

S

Safety Information 1

W

Wiring 35 1 to 5 V dc Output Signal 41 4 to 20 mA Output Signal 36 Foundation Fieldbus Communication 46 FoxCom Communications Protocol 44 HART Multidrop 40 Write Protect Jumper, Setting the 35

Z

Zeroing 54

ISSUE DATES **JAN 2000 APR 2002 SEP 2003**

NOV 2004

Vertical lines to the right of text or illustrations indicate areas changed at last issue date.

33 Commercial Street Foxboro, MA 02035-2099 United States of America http://www.foxboro.com Inside U.S.: 1-866-746-6477 Outside U.S.: 1-508-549-2424 or contact your local Foxboro Representative.

Copyright 2000-2004 Invensys Systems, Inc.

All rights reserved

affiliates.

Facsimile: (508) 549-4492

MB 100

All other brand names may be trademarks of their respective owners.

Printed in U.S.A.

Invensys, Foxboro, FoxCom, and I/A Series are trademarks of Invensys plc, its subsidiaries, and

1104

e . . .